

860

Operating Instructions

IMPORTANT
READ CAREFULLY BEFORE USE
KEEP FOR FUTURE REFERENCE

All rights reserved.

Property of Dürkopp Adler GmbH and protected by copyright.
Any reuse of these contents, including extracts, is prohibited without
the prior written approval of Dürkopp Adler GmbH.

Copyright © Dürkopp Adler GmbH 2021


1	About these instructions	5
1.1	For whom are these instructions intended?	5
1.2	Representation conventions – symbols and characters	6
1.3	Other documents	7
1.4	Liability	8
2	Safety.....	9
2.1	Basic safety instructions.....	9
2.2	Signal words and symbols used in warnings.....	10
3	Machine description.....	15
3.1	Components of the machine	15
3.2	Proper use.....	16
3.3	Declaration of Conformity	17
4	Operation	19
4.1	Preparing the machine for operation	19
4.2	Switching on and off the machine	20
4.3	Switching on and off the sewing light	21
4.4	Inserting or changing the needle	22
4.4.1	In 1-needle machines	23
4.4.2	In 2-needle machines	24
4.5	Threading the needle thread	26
4.5.1	In 1-needle machines	26
4.5.2	In 2-needle machines	32
4.6	Winding the hook thread	39
4.7	Changing the bobbin	42
4.7.1	Changing the right bobbin	43
4.7.2	Changing the left bobbin	44
4.8	Thread tension	45
4.8.1	Adjusting the needle thread tension	46
4.8.2	Opening the needle thread tension	49
4.8.3	Switching on and off the additional tension	49
4.8.4	Adjusting the hook thread tension	50
4.9	Adjusting the needle thread regulator	51
4.9.1	In 1-needle machines	51
4.9.2	In 2-needle machines	52
4.10	Locking the sewing feet at top dead center.....	54
4.11	Lifting the sewing feet.....	55
4.12	Adjusting the sewing foot pressure	56
4.13	Adjusting the rest table.....	57
4.14	Adjusting the reflected light barrier.....	58
4.15	Buttons on the button bar	58
4.15.1	Switching on and off the function of a button	60

4.15.2	Assigning functions to the favorite button.....	61
4.16	LEDs on the machine arm.....	62
4.17	Remaining thread monitor.....	63
4.18	Sewing backwards with the stitch regulator	66
4.19	Stitch length.....	67
4.19.1	Adjusting the stitch length	67
4.19.2	Sewing with 2 stitch lengths	69
4.19.3	Removing blocking of the adjusting wheels	70
4.20	Sewing.....	71
4.20.1	Pressing the pedal.....	71
4.20.2	Sewing with the machine.....	74
5	Programming	79
5.1	Buttons on the control panel.....	80
5.2	Programming a seam path	84
5.3	Assigning functions to buttons on the push button panel	84
5.4	Assigning a function to the knee button	85
6	Maintenance.....	87
6.1	Cleaning	89
6.2	Lubricating.....	91
6.2.1	Checking the oil level	92
6.2.2	Adjusting the hook lubrication	93
6.3	Servicing the pneumatic system.....	95
6.3.1	Adjusting the operating pressure.....	95
6.3.2	Draining the water condensation	97
6.3.3	Cleaning the filter element.....	98
6.4	Parts list.....	99
7	Setup	101
7.1	Checking the scope of delivery	101
7.2	Removing the transport locks.....	101
7.3	Assembling the stand.....	102
7.4	Assembling the control.....	103
7.5	Completing the tabletop	104
7.6	Assembling the pedal and setpoint device	109
7.7	Inserting the machine head.....	111
7.8	Adjusting the working height	114
7.9	Adjusting the pedal.....	115
7.10	Assembling the control panel	116
7.11	Assembling the knee button	117
7.12	Assembling the oil extraction line	118
7.13	Electrical connection	119
7.14	Establishing equipotential bonding.....	119
7.15	Pneumatic connection	120

7.15.1	Assembling the compressed air maintenance unit	121
7.15.2	Adjusting the operating pressure	121
7.16	Checking the lubrication	122
7.17	Performing a test run	122
8	Decommissioning	123
9	Disposal	125
10	Troubleshooting	127
10.1	Customer Service	127
10.2	Messages of the software	127
10.2.1	Information messages	128
10.2.2	Error Messages	132
10.3	Errors in sewing process	136
11	Technical data	139
11.1	Data and characteristic values	140
11.2	Requirements for fault-free operation	140
12	Appendix	143
12.1	Wiring diagram	143
12.2	Tabletops	144

1 About these instructions



These instructions have been prepared with utmost care. They contain information and notes intended to ensure long-term and reliable operation.

Should you notice any discrepancies or if you have improvement requests, then we would be glad to receive your feedback through **Customer Service** ( p. 127).


Consider these instructions as part of the product and keep it easily accessible.

1.1 For whom are these instructions intended?

These instructions are intended for:

- **Operators:**
This group is familiar with the machine and has access to the instructions. Specifically, chapter **Operation** ( p. 19) is important for the operators.
- **Specialists:**
This group has the appropriate technical training for performing maintenance or repairing malfunctions. Specifically, the chapter **Setup** ( p. 101) is important for specialists.

Service Instructions are supplied separately.

With regard to minimum qualification and other requirements to be met by personnel, please also follow the chapter **Safety** ( p. 9).

1.2 Representation conventions – symbols and characters

Various information in these instructions is represented or highlighted by the following characters in order to facilitate easy and quick understanding:



Proper setting

Specifies proper setting.



Disturbances

Specifies the disturbances that can occur from an incorrect adjustment.



Cover

Specifies which covers must be disassembled in order to access the components to be set.



Steps to be performed when operating the machine (sewing and equipping)



Steps to be performed for service, maintenance, and installation



Steps to be performed via the software control panel

The individual steps are numbered:

1. First step
 2. Second step
 - ... The steps must always be followed in the specified order.
- Lists are marked by bullet points.



Result of performing an operation

Change to the machine or on the display/control panel.



Important

Special attention must be paid to this point when performing a step.



Information

Additional information, e.g. on alternative operating options.



Order


Specifies the work to be performed before or after an adjustment.

References



Reference to another section in these instructions.

Safety

Important warnings for the user of the machine are specifically marked. Since safety is of particular importance, hazard symbols, levels of danger and their signal words are described separately in the chapter **Safety** ( p. 9).

Location information

If no other clear location information is used in a figure, indications of **right** or **left** are always from the user's point of view.

1.3 Other documents

The machine includes components from other manufacturers. Each manufacturer has performed a hazard assessment for these purchased parts and confirmed their design compliance with applicable European and national regulations. The proper use of the built-in components is described in the corresponding manufacturer's instructions.

1.4 Liability

All information and notes in these instructions have been compiled in accordance with the latest technology and the applicable standards and regulations.

Dürkopp Adler cannot be held liable for any damage resulting from:

- Breakage and transport damages
- Failure to observe these instructions
- Improper use
- Unauthorized modifications to the machine
- Use of untrained personnel
- Use of unapproved parts

Transport

Dürkopp Adler cannot be held liable for breakage and transport damages. Inspect the delivery immediately upon receiving it. Report any damage to the last transport manager. This also applies if the packaging is not damaged.

Leave machines, equipment and packaging material in the condition in which they were found when the damage was discovered. This will ensure any claims against the transport company.

Report all other complaints to Dürkopp Adler immediately after receiving the product.

2 Safety

This chapter contains basic information for your safety. Read the instructions carefully before setting up or operating the machine. Be sure to follow the information in the safety instructions. Failure to do so can result in serious injury and property damage.



2.1 Basic safety instructions

The machine may only be used as described in these instructions. The instructions should be available at the machine's location at all times.

Work on live components and equipment is prohibited. Exceptions are defined in the DIN VDE 0105.

For the following work, switch off the machine at the main switch or disconnect the power plug:

- Replacing the needle or other sewing tools
- Leaving the workstation
- Performing maintenance work and repairs
- Threading

Missing or faulty parts could impair safety and damage the machine. Only use original parts from the manufacturer.

Transport Use a lifting carriage or stacker to transport the machine. Raise the machine max. 20 mm and secure it to prevent it from slipping off.

Setup The connecting cable must have a power plug approved in the relevant country. The power plug may only be assembled to the power cable by qualified specialists.

Obligations of the operator Follow the country-specific safety and accident prevention regulations and the legal regulations concerning industrial safety and the protection of the environment.

All the warnings and safety signs on the machine must always be in legible condition. Do not remove!

Missing or damaged warnings and safety signs must be replaced immediately.

**Requirements
to be met by
the personnel**

Only qualified specialists may be used for:

- Setting up the machine
- Performing maintenance work and repairs
- Performing work on electrical equipment

Only authorized persons may work on the machine and must first have understood these instructions.

Operation

Check the machine during operating for any externally visible damage. Stop working if you notice any changes to the machine. Report any changes to your supervisor. Do not use a damaged machine any further.

**Safety
equipment**

Safety equipment should not be disassembled or deactivated. If it is essential to disassemble or deactivate safety equipment for a repair operation, it must be assembled and put back into operation immediately afterward.

2.2 Signal words and symbols used in warnings






Warnings in the text are distinguished by color bars. The color scheme is based on the severity of the danger. Signal words indicate the severity of the danger.

Signal words Signal words and the hazard they describe:

Signal word	Meaning
DANGER	(with hazard symbol) If ignored, fatal or serious injury will result
WARNING	(with hazard symbol) If ignored, fatal or serious injury can result

CAUTION	(with hazard symbol) If ignored, moderate or minor injury can result
CAUTION	(with hazard symbol) If ignored, environmental damage can result
NOTICE	(without hazard symbol) If ignored, property damage can result

Symbols The following symbols indicate the type of danger to personnel:

Symbol	Type of danger
	General
	Electric shock
	Puncture
	Crushing
	Environmental damage

Examples Examples of the layout of warnings in the text:

DANGER



Type and source of danger!

Consequences of non-compliance.

Measures for avoiding the danger.



This is what a warning looks like for a hazard that will result in serious injury or even death if ignored.

WARNING



Type and source of danger!

Consequences of non-compliance.

Measures for avoiding the danger.



This is what a warning looks like for a hazard that could result in serious or even fatal injury if ignored.

CAUTION



Type and source of danger!

Consequences of non-compliance.

Measures for avoiding the danger.



This is what a warning looks like for a hazard that could result in moderate or minor injury if the warning is ignored.

NOTICE

Type and source of danger!

Consequences of non-compliance.

Measures for avoiding the danger.

- ↪ This is what a warning looks like for a hazard that could result in property damage if ignored.

CAUTION



Type and source of danger!

Consequences of non-compliance.


Measures for avoiding the danger.

- ↪ This is what a warning looks like for a hazard that could result in environmental damage if ignored.

3 Machine description

3.1 Components of the machine

Fig. 1: Components of the machine

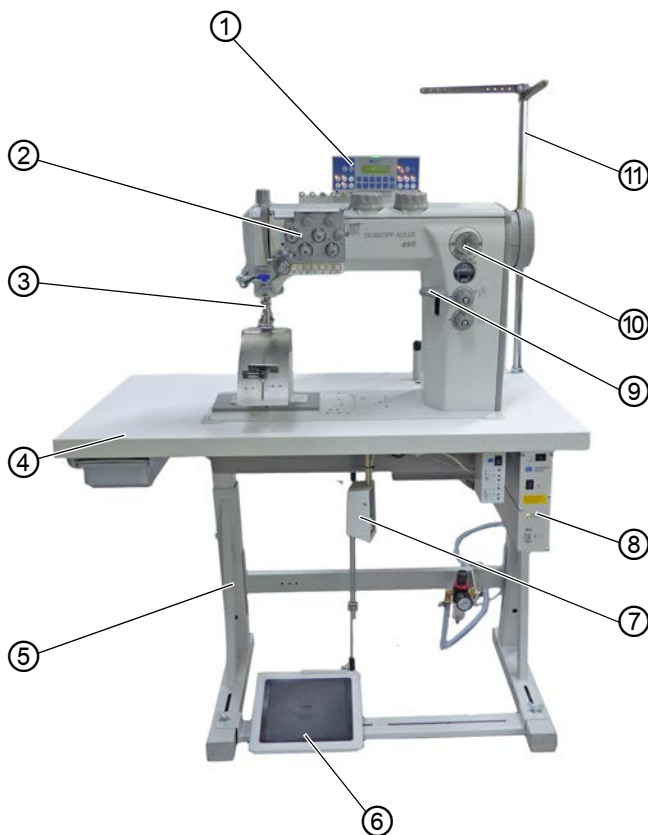

- (1) - Control panel OP1000
- (2) - Tensioning plate
- (3) - Needle bar
- (4) - Tabletop
- (5) - Stand
- (6) - Pedal

- (7) - Knee button
- (8) - Control (DAC classic)
- (9) - Stitch regulator
- (10) - Winder
- (11) - Reel stand

3.2 Proper use

WARNING



Risk of injury from live, moving and cutting parts as well as from sharp parts!

Improper use can result in electric shock, crushing, cutting and punctures.

Follow all instructions provided.

NOTICE

Non-observance will lead to property damage!

Improper use can result in material damage at the machine.

Follow all instructions provided.

The machine may only be used with sewing material that satisfies the requirements of the specific application at hand.

The machine is intended only for use with dry sewing material. The sewing material must not contain any hard objects.

The needle thicknesses permissible for the machine are listed in the **Technical data** (📖 p. 139) chapter.

The seam must be completed with a thread that satisfies the requirements of the specific application at hand.

The machine is intended for industrial use.

The machine may only be set up and operated in dry conditions on well-maintained premises. If the machine is operated on premises that are not dry and well-maintained, then further measures may be required which must be compatible with DIN EN 60204-31.

Only authorized persons may work on the machine.

Dürkopp Adler cannot be held liable for damages resulting from improper use.

3.3 Declaration of Conformity

The machine complies with European regulations ensuring health, safety, and environmental protection as specified in the declaration of conformity or in the declaration of incorporation.



4 Operation

The operating sequence consists of several different steps. Fault-free operation is necessary in order to achieve a good sewing result.

4.1 Preparing the machine for operation

WARNING







Risk of injury from moving, cutting and sharp parts!

Crushing, cutting and punctures are possible.

If possible, make preparations only when the machine is switched off.

Complete the following steps in preparation of sewing before starting to work:

- Inserting/changing the needle ( p. 22)
- Thread the needle thread ( p. 26)
- Inserting and winding on the hook thread ( p. 39)
- Adjusting the thread tension ( p. 45)

4.2 Switching on and off the machine

Fig. 2: Switching on and off the machine (1)



(1) - Main switch

(2) - LED light

Switching on the machine



To switch on the machine:

1. Set the main switch (1) to position **I**.

↳ LED light (2) is lit, indicating that the machine is ready for use.

Switching off the machine



To switch off the machine:

1. Set the main switch (1) to position **0**.

↳ LED light (2) goes out, indicating that the machine is switched off and powered off.

4.3 Switching on and off the sewing light

On the machine, you switch the sewing light on and off independently from the main switch / the machine itself.

Fig. 3: Switching on and off the sewing light (1)



(1) - Switch

Switching on the sewing light



To switch on the sewing light:

1. Set the switch (1) to position I.

4.4 Inserting or changing the needle

CAUTION



Risk of injury from sharp parts!

Puncture possible.

Switch off the machine before you insert or change the needle.

NOTICE


Property damage may occur!

There is a risk of machine damage, needle breakage or thread breaking if the distance between needle and hook tip is incorrect.

Set the distance to the hook tip after inserting a needle with a different strength.

4.4.1 In 1-needle machines

Fig. 4: In 1-needle machines

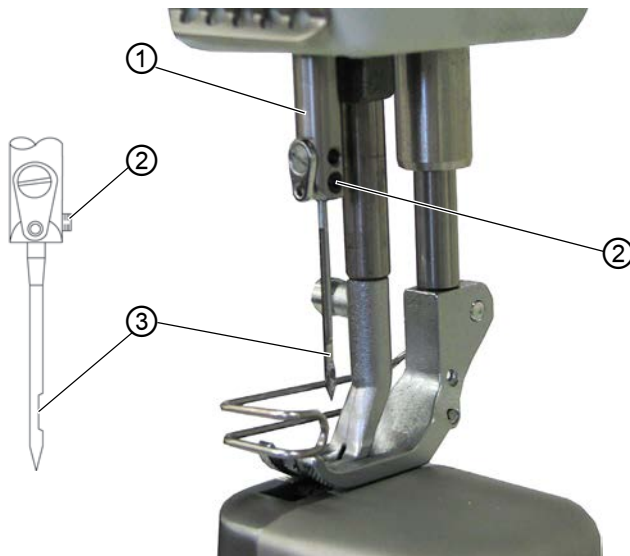

(1) - Needle bar
(2) - Screw

(3) - Groove



To change the needle in a 1-needle machine:

1. Turn the handwheel until the needle bar (1) has reached the upper end position.
2. Loosen the screw (2).
3. Pull the needle out towards the bottom.
4. Insert the new needle into the hole in the needle bar (1) until it reaches the end stop.




Important

Align the new needle in such a way that the groove (3) faces the hook.

5. Tighten the screw (2).



Order

Always adjust the clearance between the hook and the needle after changing to a different needle strength ( *Service Instructions*).


Disturbance

An incorrect hook side clearance can cause the following disturbances:

- Changing to a thinner needle:
 - Skip stitches
 - Thread damage
- Changing to a thicker needle:
 - Damage to the hook tip
 - Damage to the needle

4.4.2 In 2-needle machines

Fig. 5: In 2-needle machines

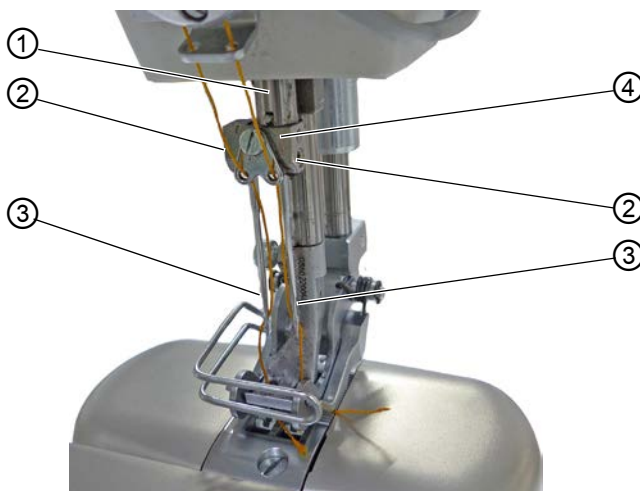

(1) - Needle bar
(2) - Screw

(3) - Groove
(4) - Needle holder



To change the needle in a 2-needle machine:

1. Turn the handwheel until the needle bar (1) has reached the upper end position.
2. To change the right needle, loosen the right screw (2).
3. To change the left needle, loosen the left screw (2).
4. Pull the needle(s) downwards out of the needle holder (4).
5. Insert new needle(s) into the corresponding hole of the needle holder (4) until you reach the stop.


Important

Align new needles so that the grooves (3) point towards the hook. As viewed from the operator level, the groove (3) of the left needle must point to the left, while the groove (3) of the right needle must point to the right.

6. Tighten the screw (2).



Order

Always adjust the clearance between the hook and the needle after changing to a different needle strength ( *Service Instructions*).



Disturbance

An incorrect hook side clearance can cause the following disturbances:

- Changing to a thinner needle:
 - Skip stitches
 - Thread damage
- Changing to a thicker needle:
 - Damage to the hook tip
 - Damage to the needle

4.5 Threading the needle thread

4.5.1 In 1-needle machines

WARNING



Risk of injury from needle tip and moving parts!

Puncture, cutting and crushing possible.

Switch off the machine before threading the needle thread.




To thread the needle thread:

1. Fit the thread reel on the reel stand.

The thread guide (1) must stand directly above the thread reel.

Fig. 6: In 1-needle machines (1)

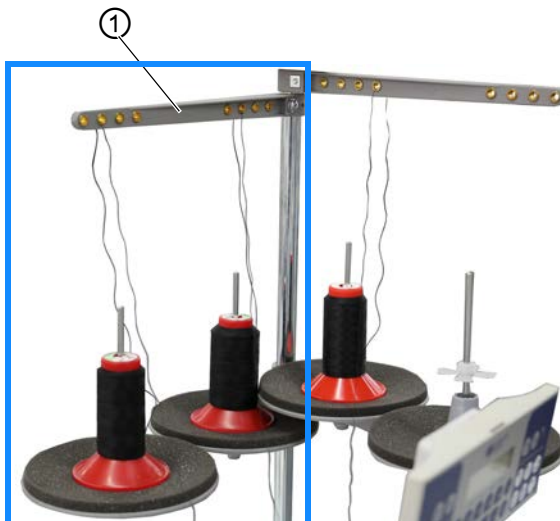

(1) - Thread guide

Fig. 7: In 1-needle machines (2)




(1) - Thread guide



2. Insert the needle thread from the rear to the front through the thread guide on the unwinding bracket (1).

Fig. 8: In 1-needle machines (3)

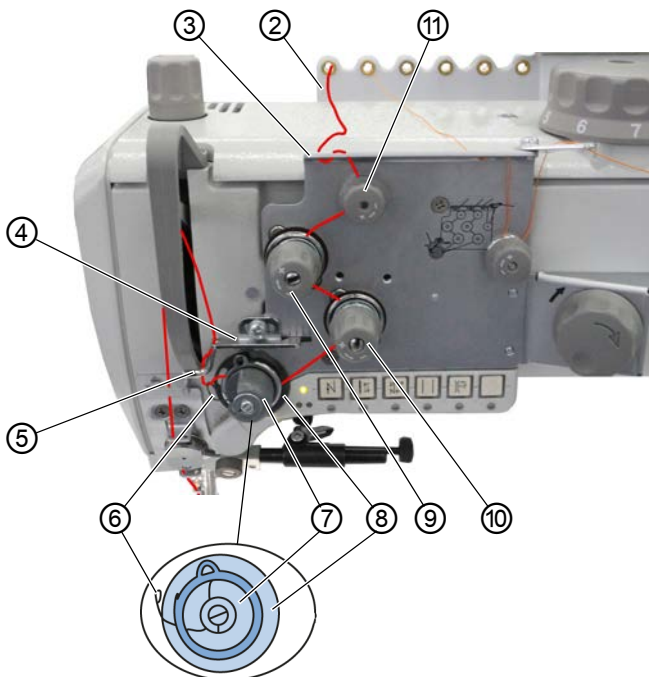


- (2) - Thread guide
- (3) - Thread guide
- (4) - Needle thread regulator
- (5) - Hook
- (6) - Spring tip

- (7) - Thread tensioning spring
- (8) - Tightening lever
- (9) - Additional tension
- (10) - Main tension
- (11) - Pretension



3. Insert the needle thread from the rear to the front through the thread guide (2).
4. Insert the needle thread in a wavelike manner through the left holes of the thread guide (3): From the top left to the bottom, from the bottom to the top and from the top to the bottom.
- ↳ The needle thread must be inserted into the thread guide (3) through three holes.
5. Guide the needle thread clockwise around the pretension (11).
6. Guide the needle thread counterclockwise around the additional tension (9).
7. Guide the needle thread clockwise around the main tension (10).
8. Guide the needle thread clockwise to the thread tensioning spring (7).
9. Lift the tightening lever (8) with the needle thread.
10. Pull the needle thread under the spring tip (6).
11. Guide the needle thread under the hook (5).
12. Insert the needle thread from the bottom through the hole on the needle thread regulator (4).

Fig. 9: In 1-needle machines (4)

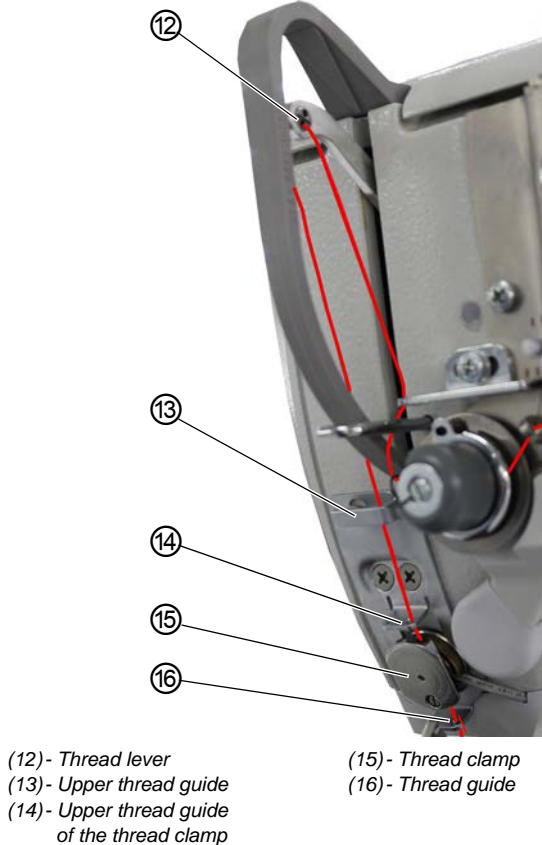

13. Thread the needle thread from the right through the lower hole on the thread lever (12).
14. Insert the needle thread through the upper thread guide (13).



For machines with thread clamp (optional)

15. Insert the needle thread through the right hole of the thread guide above the thread clamp (14).
16. Insert the needle thread through the right hole of the thread clamp (15).


Fig. 10: In 1-needle machines (5)



17. Insert the needle thread into the thread clamp (15) from the left so that the thread is held in place inside the hook of the thread clamp (15).

The needle thread is supposed to run through the thread clamp almost without touching it and in such a way that it only makes contact with the thread guides above and below the thread clamp.

Fig. 11: In 1-needle machines (6)

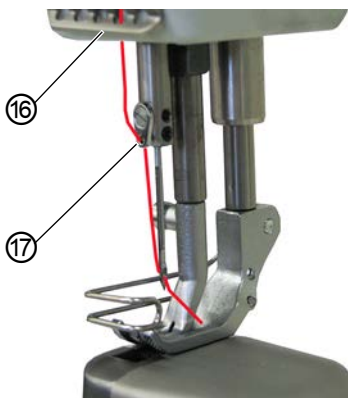

(16) - Thread guide

(17) - Thread guide of the needle bar




18. Insert the needle thread through the right hole of the thread guide (16).



Important

Fig. 12: In 1-needle machines (7)

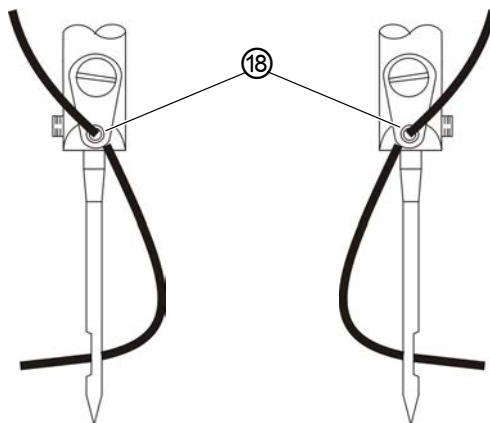

For 868-390XXX-M

For 868-190XXX-M



19. Insert the needle thread through the thread guide of the needle bar (17).

20. Insert the needle thread through the needle eye in such a way that the loose thread end faces the hook.



For machines with thread trimmer

21. Pull the needle thread through the needle eye until the loose thread end has a length of approx. 4 cm with the thread lever (12) at the highest position.



Important

Check the thread length.

If the loose thread end is too long, the needle thread may be caught by the hook and cause a disturbance. If the loose thread end is too short, the machine cannot start sewing.

4.5.2 In 2-needle machines

WARNING



Risk of injury from needle tip and moving parts!

Puncture, cutting and crushing possible.

Switch off the machine before threading the needle threads.




To thread the right and the left needle thread:

1. Fit the thread reels on the reel stands.

The unwinding bracket (1) must stand directly above the thread reels.

Fig. 13: In 2-needle machines (1)

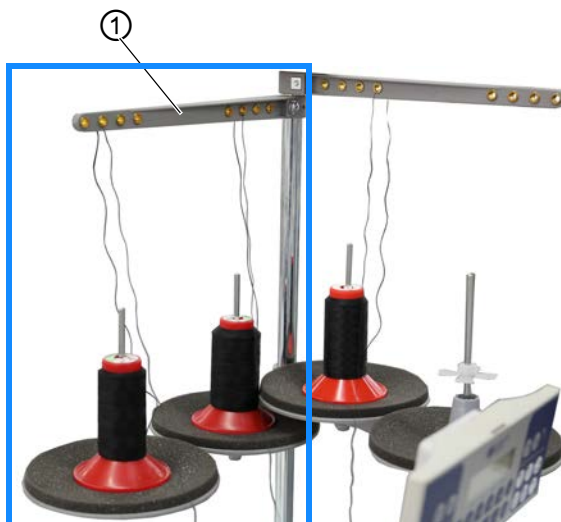

(1) - Thread guide

Fig. 14: In 2-needle machines (2)




(1) - Thread guide



2. Insert the right needle thread from the rear to the front through the right thread guide on the unwinding bracket (1).
3. Insert the left needle thread from the rear to the front through the left thread guide on the unwinding bracket (1).

Threading the right needle thread at the tensioning plate

Fig. 15: In 2-needle machines (3)

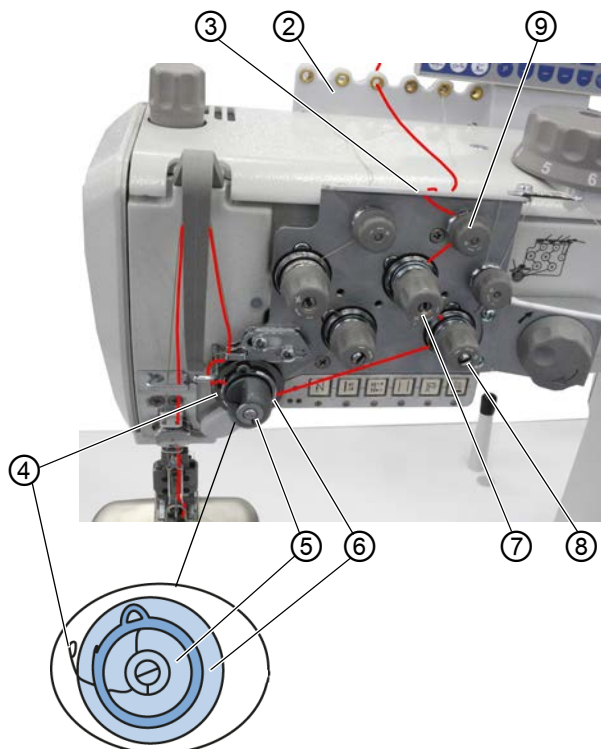

- | | |
|--------------------------------|---|
| (2) - Thread guide | (7) - Additional tension
(right needle thread) |
| (3) - Thread guide | (8) - Main tension
(right needle thread) |
| (4) - Spring tip | (9) - Pretension
(right needle thread) |
| (5) - Thread tensioning spring | |
| (6) - Tightening lever | |




4. Insert the needle thread from the rear to the front through the thread guide (2).
5. Insert the needle thread in a wavelike manner through the 3 center holes of the thread guide (3): From the center at the top right to the bottom, from the bottom to the top and from the top to the bottom.
6. Guide the needle thread clockwise around the pretension (9).
7. Guide the needle thread counterclockwise around the additional tension (7).

8. Guide the needle thread clockwise around the main tension (8).
9. Guide the needle thread clockwise to the thread tensioning spring (5).
10. Lift the tightening lever (6) with the needle thread.
11. Pull the needle thread under the spring tip (4).

Threading the left needle thread at the tensioning plate

Fig. 16: In 2-needle machines (4)

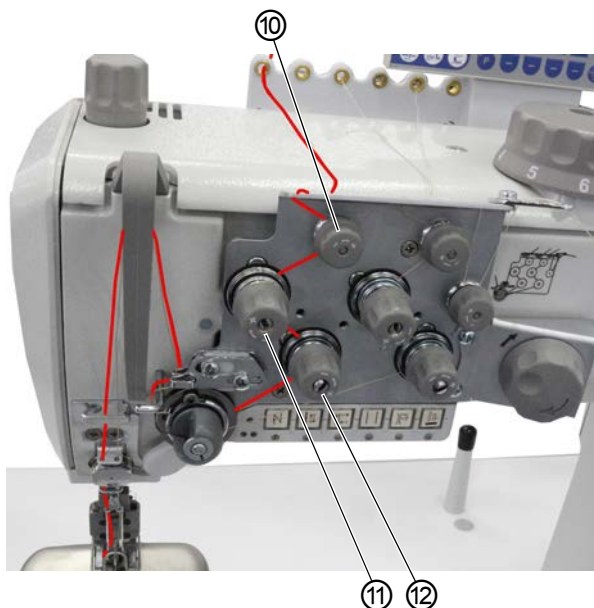

- (10) - Pretension (left needle thread) (12) - Main tension (left needle thread)
(11) - Additional tension (left needle thread)




12. Insert the left needle thread from the rear to the front left through the thread guide (2).
13. Insert the left needle thread in a wavelike manner through the 3 left holes of the thread guide (3): From the center at the top right to the bottom, from the bottom to the top and from the top to the bottom.
14. Guide the needle thread clockwise around the pretension (10).

15. Guide the needle thread counterclockwise around the additional tension (11).
16. Guide the needle thread clockwise around the main tension (12).
17. Guide the needle thread clockwise to the thread tensioning spring (5).
18. Lift the tightening lever (6) with the needle thread.
19. Pull the needle thread under the spring tip (4).

Threading the needle thread at the needle thread regulator

Fig. 17: In 2-needle machines (5)

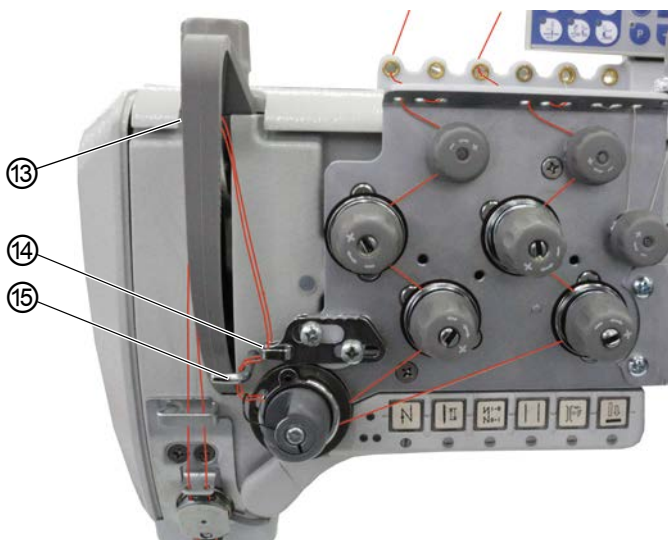

(13)- Thread lever (not visible)

(15)- Hook


(14)- Needle thread regulator



20. Guide the right needle thread behind the hook (15).
21. Guide the left needle thread behind the hook (15).
22. Thread the right needle thread from the bottom through the front hole on the needle thread regulator (14).
23. Thread the left needle thread from the bottom through the rear hole on the needle thread regulator (14).
24. Thread the right needle thread from the right through the lower hole on the thread lever (13).

25. Thread the left needle thread from the right through the upper hole on the thread lever (13).

Fig. 18: In 2-needle machines (6)

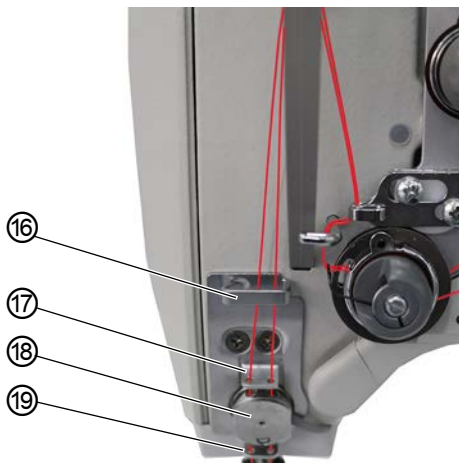

(16) - Upper thread guide
(17) - Thread guide

(18) - Thread clamp
(19) - Thread guide



26. Insert the right and the left needle thread through the upper thread guide (16).


For machines with thread clamp (optional)

27. Insert the right needle thread through the right hole of the thread guide (17).
28. Insert the left needle thread through the left hole of the thread guide (17).
29. Insert the right needle thread through the right hole of the thread clamp (18).

The needle thread is supposed to run through the clamp almost without touching it and in such a way that it only makes contact with thread guides (17) and (19).
30. Insert the left needle thread through the left hole of the thread clamp (18).
31. Insert the right needle thread through the right hole of the thread guide (19).

32. Insert the left needle thread through the left hole of the thread guide (19).

Fig. 19: In 2-needle machines (7)

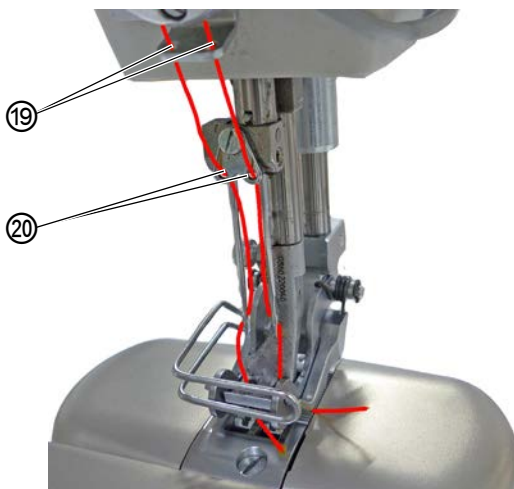

(19) - Thread guide

(20) - Thread guide



33. Insert the right needle thread through the right hole of the thread guide (20).
34. Insert the left needle thread through the left hole of the thread guide (20).
35. Insert the right needle thread through the right needle eye in such a way that the loose thread end faces the right hook.
36. Insert the left needle thread through the left needle eye in such a way that the loose thread end faces the left hook.



For machines with thread trimmer

37. Pull each needle thread through the needle eye until the loose thread end has a length of approx. 4 cm with the thread lever (13) at the highest position.

**Important**

Check the thread length.

If the loose thread end is too long, the needle thread may be caught by the hook and cause a disturbance. If the loose thread end is too short, the machine cannot start sewing.

4.6 Winding the hook thread

WARNING**Risk of injury from needle tip and moving parts!**

Puncture, cutting and crushing possible.

Switch off the machine before threading the needle thread.




To thread the hook thread:

1. Fit the thread reel on the reel stand.

The thread guide (1) must stand directly above the thread reel.

Fig. 20: Winding the hook thread (1)

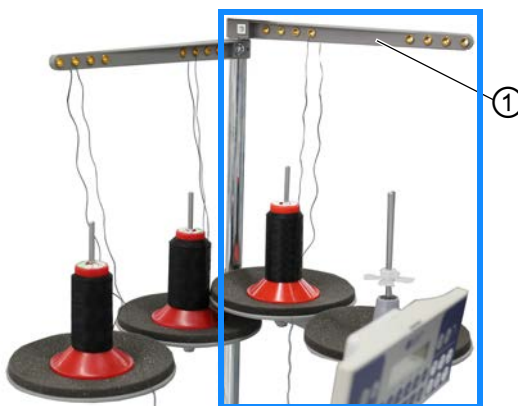

(1) - Thread guide

Fig. 21: Winding the hook thread (2)




(1) - Thread guide



2. Insert the hook thread from the rear to the front through the right thread guide on the unwinding bracket (1).

Fig. 22: Winding the hook thread (3)

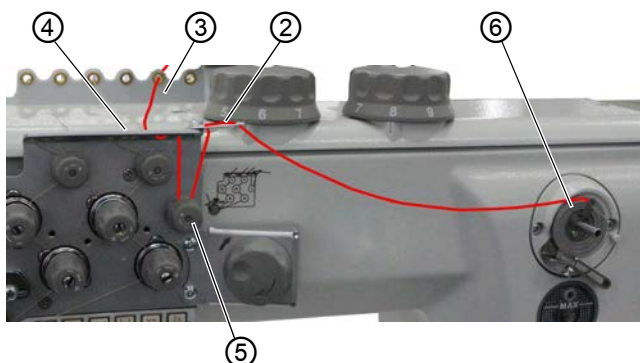

(2) - Thread guide

(5) - Pretension

(3) - Thread guide

(6) - Winder


(4) - Thread guide



3. Insert the hook thread from the rear to the front through the thread guide (3).
4. Insert the hook thread in a wavelike manner through the 3 right holes of the thread guide (4): From the top into the left hole, from the bottom into the center hole, and from the top into the right hole.
- ↳ The last hole is the hole on the far right in the thread guide (4).

5. Guide the hook thread counterclockwise around the pre-tension (5).
6. Insert the hook thread through thread guide (2): From the bottom left to the top and from the top to the bottom.
- ↳ The last hole is the hole on the far right in the thread guide (2).
7. Guide the hook thread to the winder (6).

Fig. 23: Winding the hook thread (4)

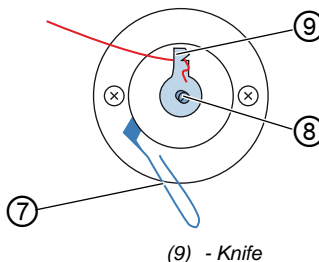

(7) - Winder lever
(8) - Bobbin shaft

(9) - Knife



8. Clamp the hook thread behind the cutter (9) and tear off the loose end behind it.
9. Fit the empty bobbin onto the bobbin shaft (8).
10. Turn the bobbin clockwise until it clicks.
11. Pull the winder lever (7) up against the bobbin.
12. Switch on the machine.
13. Press the pedal forward to position 1.
- ↳ The machine sews and winds the hook thread from the thread reel onto the bobbin. When the bobbin is filled, the winding process stops. The winder lever moves back down. The knife is automatically moved to its vertical initial position.
14. Remove the full bobbin from the bobbin shaft (8).
15. Tear off the hook thread behind the cutter (9).

You can now fill the next bobbin. You can insert the full bobbin into the hook.

4.7 Changing the bobbin

WARNING



Risk of injury from needle tip and moving parts!

Puncture, cutting and crushing possible.


Turn off the machine before changing a bobbin.



Machines with automatic remaining thread monitor

If the hook thread needs to be replaced, the LED indicator lamps (1) light up on the machine arm. The left light is for the left-hand hook, and the right light is for the right-hand hook.


Fig. 24: Changing the bobbin

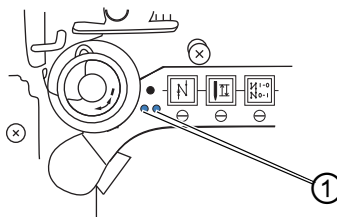

(1) - LED indicator lamp

4.7.1 Changing the right bobbin

Fig. 25: Changing the right bobbin

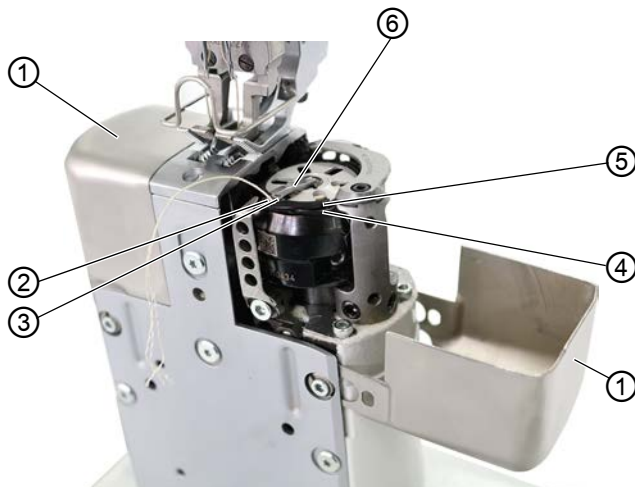

- (1) - Hook cover
- (2) - Slot
- (3) - Guide
- (4) - Tension spring

- (5) - Slot
- (6) - Bobbin case retainer



To change the right bobbin:

1. Pull the right hook cover (1) up by a few millimeters before pivoting it to the right.
2. Swivel up the bobbin case retainer (6).
3. Remove the empty bobbin.
4. Insert a full bobbin:



Important

Insert the bobbin so that it moves in the opposite direction of the hook when the thread is pulled out.



Information

If the machine is equipped with a remaining thread monitor, the bobbins will come with a thread supply groove embedded in the bobbin core. Insert these types of bobbin in the hook in such a way that the thread supply groove faces down (📖 p. 63). Otherwise, the remaining thread monitor will not work.

5. Feed the hook thread through the slot (5) in the bobbin case retainer.
6. Pull the hook thread under the tension spring (4).
7. Feed the hook thread through the slot (2) and pull it approx. 3 cm further.
8. Close the bobbin case retainer (6).
9. Fold the hook cover (1) closed.

4.7.2 Changing the left bobbin

Fig. 26: Changing the left bobbin



The left hook has the same design as the right hook, but is rotated by 180°.



To change the left bobbin:

1. Change the left bobbin following the same order as for the right bobbin (📖 p. 43).

4.8 Thread tension


Together with the hook thread tension, the needle thread tension influences the final seam pattern. With thin sewing material, excessive thread tension can lead to undesired ruffing and thread breaking.



Proper setting

If the tension of needle thread and hook thread is identical, the thread interlace lies in the middle of the sewing material. Adjust the needle thread tension so that the desired seam pattern is achieved with the lowest possible tension.

Fig. 27: Thread tension

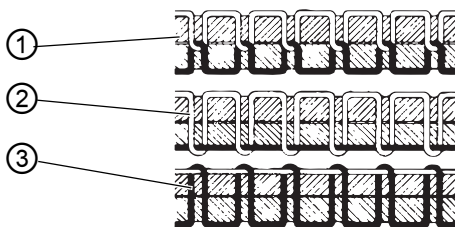

- (1) - Identical needle thread and hook thread tension
- (2) - Hook thread tension higher than needle thread tension
- (3) - Needle thread tension higher than hook thread tension

4.8.1 Adjusting the needle thread tension

WARNING




Risk of injury from needle tip and moving parts!

Puncture, cutting and crushing possible.

Switch off the machine before adjusting the needle thread tension.

Fig. 28: Adjusting the needle thread tension (1)

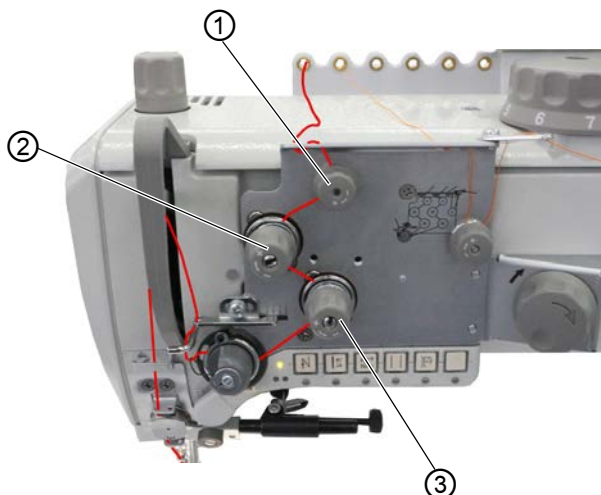

(1) - Pretension

(2) - Additional tension

(3) - Main tension

Fig. 29: Adjusting the needle thread tension (2)



(4) - Adjusting wheel

(5) - Bolt

Pretension

The pretension (1) generates a residual tension of the needle thread. When main tension (3) and additional tension (2) are open, a small amount of residual tension of the needle thread is required.

The pretension also affects the length of the cut needle thread and, thus, the length of the initial thread for the new seam.



Proper setting

Turn the adjusting wheel (4) until the front side is flush with the bolt (5).



To adjust the length of the initial thread:

Shorter initial thread

1. Turn the adjusting wheel (4) of the pretension (1) clockwise.

Longer initial thread

1. Turn the adjusting wheel (4) of the pretension (1) counter-clockwise.

Main tension

The main tension (3) must be set in such a way that the thread interlacing is exactly in the middle of the sewing material.



Disturbance

Possible consequences of the needle thread tension is set too high:

- Gathering when using thin sewing material
- Thread breaking



Proper setting

Set the main tension (3) so that an even stitch pattern is achieved.



To adjust the needle thread tension:

Increasing the needle thread tension

1. Turn the adjusting wheel (4) of the main tension (3) clockwise.

Reducing the needle thread tension

1. Turn the adjusting wheel (4) of the main tension (3) counter-clockwise.

Additional tension

The switchable additional tension (2) can be used to quickly adjust the needle thread tension, e.g. for thickened seams.



Proper setting

The additional tension (2) must be set lower than the main tension (3).


4.8.2 Opening the needle thread tension

On machines with thread trimmer, the needle thread tension is opened automatically when the thread is cut.

4.8.3 Switching on and off the additional tension

On machines without thread trimmer, the additional tension is switched on and off mechanically.

Fig. 30: Switching on and off the additional tension

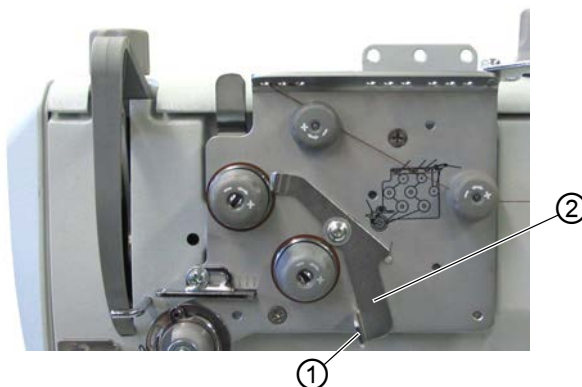

(1) - Handle

(2) - Lever



To switch the additional tension on:

1. Push the lever (2) on the handle (1) to the right.



To switch the additional tension off:

1. Push the lever (2) on the handle (1) to the left.



Information

On machines with thread trimmer, the additional tension is switched on and off with the press of a button housed in the push button panel.

4.8.4 Adjusting the hook thread tension

WARNING




Risk of injury from needle tip and moving parts!

Puncture, cutting and crushing possible.

Switch off the machine before adjusting the hook thread tension.

Fig. 31: Adjusting the hook thread tension

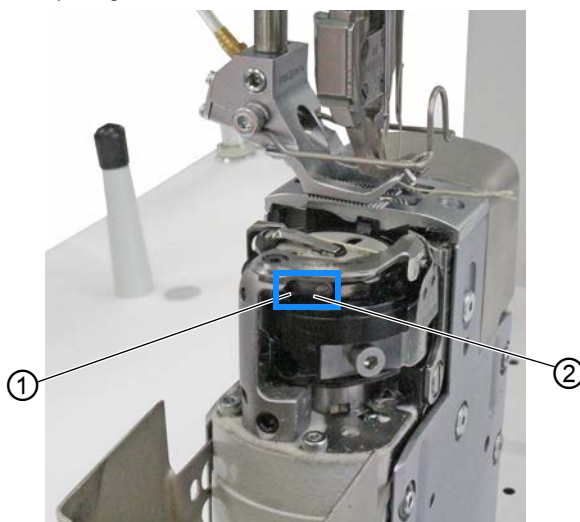

(1) - Adjusting wheel

(2) - Tension spring

The hook thread tension is adjusted using the tension spring (2).



To adjust the hook thread tension:

Increasing the hook thread tension

1. Turn the adjusting wheel (1) clockwise.

Reducing the hook thread tension

1. Turn the adjusting wheel (1) counterclockwise.

4.9 Adjusting the needle thread regulator

WARNING



Risk of injury from needle tip and moving parts!

Puncture, cutting and crushing possible.

Switch off the machine before adjusting the needle thread regulator.

The needle thread regulator determines the tension applied to guide the needle thread around the hook.




Proper setting

The loop of the needle thread slides at low tension over the thickest point of the hook.

4.9.1 In 1-needle machines

Fig. 32: In 1-needle machines

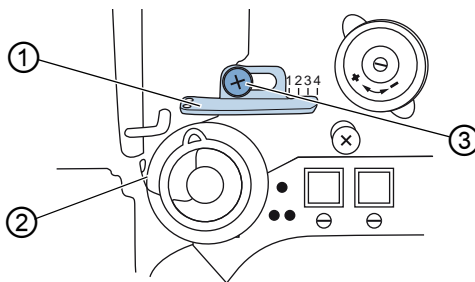

(1) - Needle thread regulator
(2) - Thread tensioning spring

(3) - Screw



To adjust the needle thread regulator for the needle thread in a 1-needle machine:

1. Loosen the screw (3).
 - **To increase the tension:**
Slide the needle thread regulator (1) to the right
 - **To reduce the tension:**
Slide the needle thread regulator (1) to the left
2. Tighten the screw (3).




Information

When the largest thread quantity is required, the thread tensioning spring (2) must be pulled approx. 0.5 mm up from its lower end position. This occurs when the needle thread loop passes the maximum hook diameter.

4.9.2 In 2-needle machines

Fig. 33: In 2-needle machines

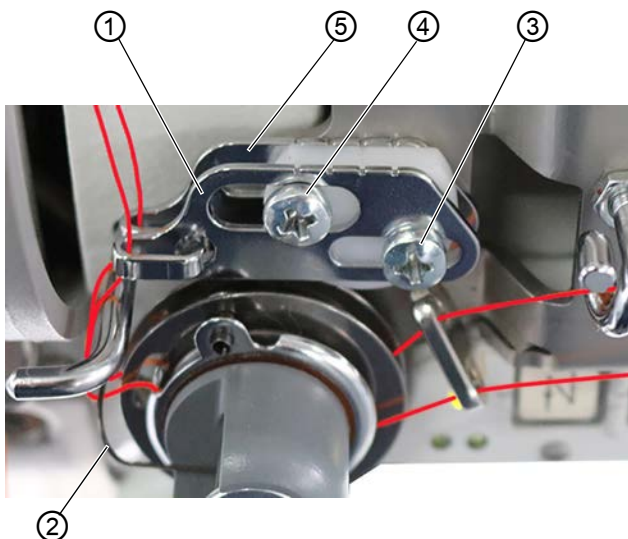

- | | |
|--|---|
| (1) - Needle thread regulator
(right needle thread) | (4) - Screw (left needle thread) |
| (2) - Thread tensioning spring | (5) - Needle thread regulator
(left needle thread) |
| (3) - Screw (right needle thread) | |



To adjust the needle thread regulator for the right and the left needle thread in a 2-needle machine:

- To adjust the needle thread regulator for the right needle thread: Loosen the screw (3).
 - To increase the tension:**
Slide the needle thread regulator (1) to the right.
 - To reduce the tension:**
Slide the needle thread regulator (1) to the left.

2. Tighten the screw (3).
 3. To adjust the needle thread regulator for the left needle thread:
Loosen the screw (4).
 - **To increase the tension:**
Slide the needle thread regulator (5) to the right.
 - **To reduce the tension:**
Slide the needle thread regulator (5) to the left.
 4. Tighten the screw (4).
-

**Information**

When the largest thread quantity is required, the thread tensioning spring (2) must be pulled approx. 0.5 mm up from its lower end position. This occurs when the needle thread loop passes the maximum hook diameter.

4.10 Locking the sewing feet at top dead center

CAUTION




Risk of injury from moving parts!

Risk of crushing when lowering the sewing foot.

Do not reach under the sewing feet.

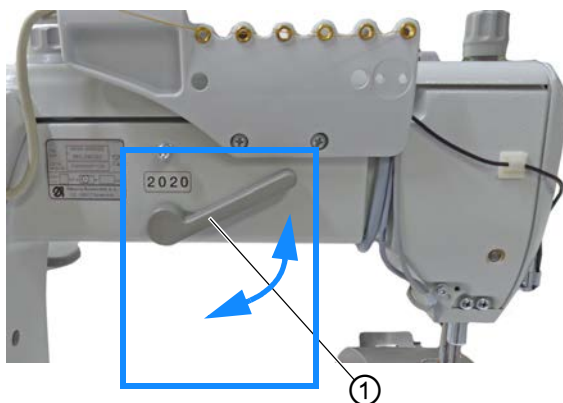

Fig. 34: Locking the sewing feet at top dead center



(1) - Lever



To lock the sewing feet at top dead center:

1. Swivel the lever (1) down.
 The sewing foot is locked in place in top dead center.
2. Swivel the lever (1) up.
 The lock is removed.



Information

The sewing foot can also be lifted pneumatically using the pedal or the knee button. The lever (1) will then swivel back up automatically.

4.11 Lifting the sewing feet

Fig. 35: Lifting the sewing feet



(1) - Pedal



To lift the sewing feet electropneumatically using the pedal:

1. Press the pedal (1) back to position **-1**.
 - ↳ The machine stops and lifts the sewing feet.
The sewing feet remain up as long as the pedal (1) is pressed back in position **-1**.
- or
1. Press the pedal (1) fully back to position **-2**.
 - ↳ Thread cutting is activated, and the sewing feet are raised.

4.12 Adjusting the sewing foot pressure


NOTICE

Property damage may occur!

Damage to the sewing material.

Set the sewing foot pressure such that the sewing material is not pinched and does not have too much play.

Fig. 36: Adjusting the sewing foot pressure

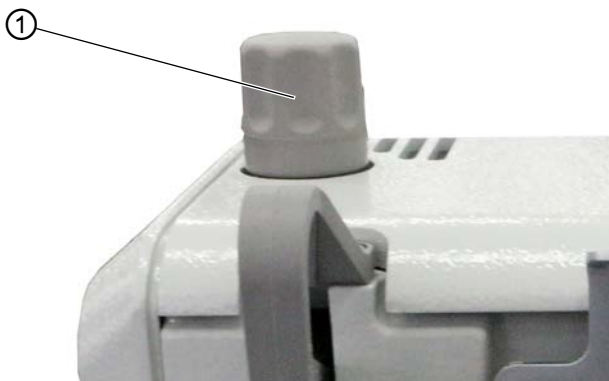

(1) - Adjusting wheel

The sewing foot pressure is set using the adjusting wheel (1).



To adjust the sewing foot pressure:

Increasing the sewing foot pressure

1. Turn the adjusting wheel (1) clockwise.


Reducing the sewing foot pressure

1. Turn the adjusting wheel (1) counterclockwise.

4.13 Adjusting the rest table

The rest table allows you to define a fixed distance (in inches or centimeters) from the needle penetration position to the desired marking on the rest table.

Fig. 37: Adjusting the rest table

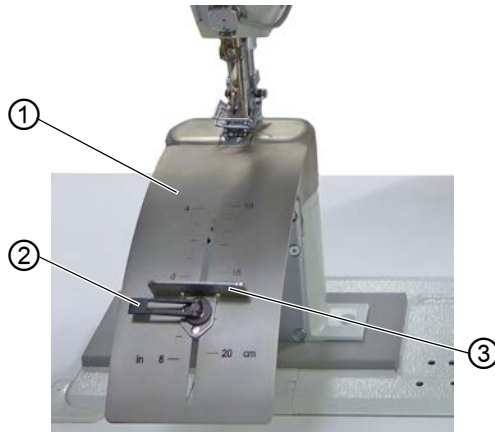

(1) - Rest table
(2) - Clamping lever

(3) - Stop



To adjust the rest table:

1. Lift the clamping lever (2).
2. Set the stop (3) to the desired length.
3. Tighten the clamping lever (2) again.

4.14 Adjusting the reflected light barrier

The setting of the reflected light barrier varies with the distance of the reflected light barrier to the reflecting foil.

The alignment is made using a light spot that is visible on the reflecting foil.

Setting the parameters of the light barrier function

Parameter	Function	Setting
009	Light barrier	ON
004	Equalizing stitch, long stitch	
010	Equalizing stitch, short stitch	

4.15 Buttons on the button bar



Information

 
 
 
 

 
 


 
The number of buttons and their functions vary with the equipment of the machine.

Fig. 38: Buttons on the push button arm




The machine has push buttons on the machine arm which can be used to activate specific functions while sewing.

Functions of the buttons

Button	Function
	Sewing backwards The machine sews in reverse while the button is pressed.
	Needle position When the button is activated, the needle moves to a specific position. This position is determined individually via the parameter settings  p. 79. The machine comes configured so that selecting the button will bring the needle up.
	Start bartack/end bartack This button cancels the general setting for sewing start and end bartacks. If start/end bartacks are on, pressing the button skips the next bartack. If start/end bartacks are off, pressing the button sews the next bartack. For the general setting required for sewing start and end bartacks, refer to the  <i>Instructions for use DAC basic/classic</i> .
	Stitch length When this function is active, the machine sews with the greater stitch length.
	Additional thread tension The auxiliary thread tension can be activated using this button.
	Pneumatic seam middle guide The 6 th button housed in the push button panel on the machine is either assigned the pneumatic seam middle guide or is fully customizable. If a pneumatic seam middle guide has been assembled to the machine, you can use this button to activate it  p. 71.
	Fully customizable The button is fully customizable.

4.15.1 Switching on and off the function of a button

Fig. 39: Switching on and off the function of a button

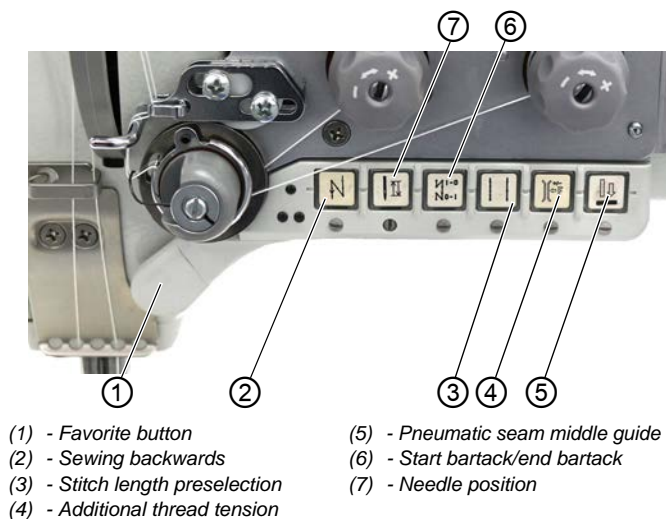

To switch a function on and off:

Switching a function on

1. Press the desired button (1)/(2)/(3)/(4)/(5)/(6)/(7).
- ✎ The function is activated. The pressed button lights up.


Switching a function off

1. Press the button (1)/(2)/(3)/(4)/(5)/(6)/(7) again.
- ✎ The function is deactivated. The pressed button turns off.

4.15.2 Assigning functions to the favorite button

You can transfer the button functions to the favorite buttons. Select a function that you frequently use so that you can switch it on quickly while sewing.

Fig. 40: Assigning a function to the favorite button

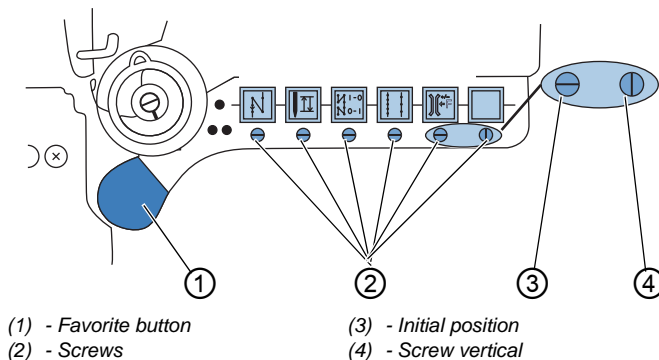

The button function is assigned by turning the screw (2) under the button until it is vertical. Only one function at a time can be assigned to the favorite button (1). Therefore, only one of the screws (2) may be in the vertical (4) position.

All screws must be turned back to their horizontal initial position (3) before a new function is assigned.




To assign a function to the favorite button:

1. Turn all screws (2) to their initial position (3) so that the slots of the screws are horizontal.
2. Turn the screw (2) under the desired button 90° so that the slot is vertical (4).

4.16 LEDs on the machine arm

Fig. 41: LEDs on the machine arm

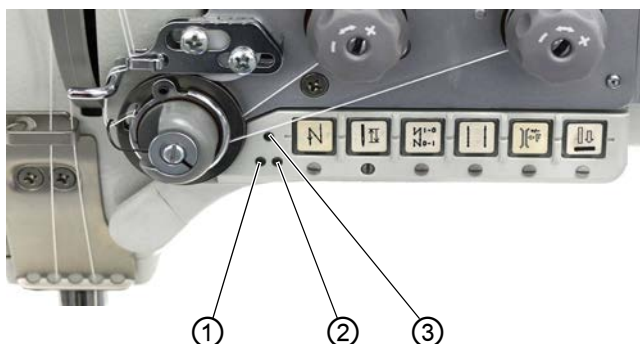

- (1) - LED
(left remaining thread monitor)
- (2) - LED
(right remaining thread monitor)

(3) - LED

LED	Meaning
1	When the left LED is on, the remaining thread monitor signals that the bobbin in the left hook is almost empty.
2	When the right LED is on, the remaining thread monitor signals that the bobbin in the right hook is almost empty.
3	When on, the LED signals that the machine is switched on and not powered off.

4.17 Remaining thread monitor

WARNING




Risk of injury from moving, cutting and sharp parts!

Crushing, cutting and punctures are possible.

Only change the hook bobbin with the machine switched off.

Remaining thread monitor in action

Fig. 42: Remaining thread monitor in action (2)

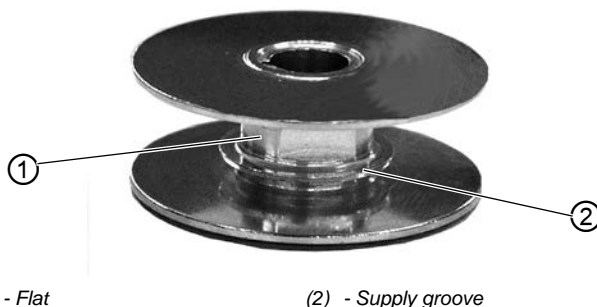


Depending on the subclass of the machine, the hook may be fitted with a remaining thread monitor. The remaining thread monitor monitors the hook thread quantity on the bobbin inside the hook. If the light beam from the light barrier is reflected off the flat (1) on the bobbin core during sewing, the LED next to the push button panel on the machine arm comes on. This signals that the hook thread quantity is running low.

The remaining hook thread quantity will be sufficient to complete the seam and change the bobbin.




Proceed as follows when the remaining thread monitor signals the end of the hook thread:

1. Finish the seam you started.
-  The hook thread quantity in the supply groove (2) of the bobbin is usually sufficient to do so.

2. Press the pedal to position **-2** at the seam end (📖 p. 71).
↳ The thread is cut off.
3. Remove the sewing material.

Fig. 43: Remaining thread monitor in action (4)

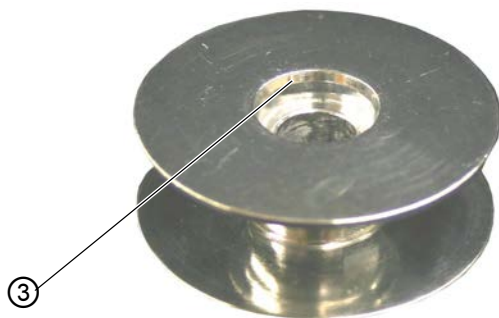

(3) - Milling groove



Important

Insert the new bobbin so that the milling groove (3) is facing down.



4. Change the bobbin (📖 p. 42).
↳ You can start sewing a new seam.
5. Take the remaining thread off the bobbin you removed.
6. If necessary, wind a new hook thread onto the empty bobbin (📖 p. 39).

Cleaning the remaining thread monitor

WARNING




Risk of injury from moving, cutting and sharp parts!

Crushing, cutting and punctures are possible.


Remove any sewing dust from the bobbin case and the light barrier.

Do not clean the lenses of the light barriers unless the machine is switched off.

Even the smallest remnants of fabric and yarn on its sensor will cause the remaining thread monitor to stop working properly. To ensure fault-free operation, you must clean the sensor of the remaining thread monitor using compressed air at least once a day ( p. 89).




To clean the remaining thread monitor:

1. Switch off the machine.
 2. Clean the lenses of the light barrier using compressed air.
-  The machine can be switched back on.

4.18 Sewing backwards with the stitch regulator

The stitch regulator on the machine arm reduces the stitch length down to sewing backwards in the lower end position.

Fig. 44: Sewing backwards with the stitch regulator

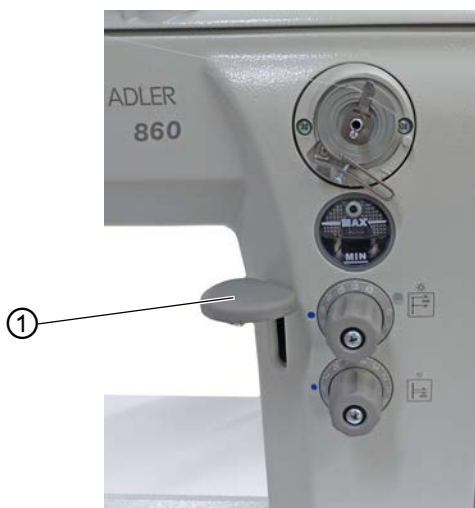

(1) - Stitch regulator



To sew backwards:

1. Slowly push the stitch regulator (1) down.
- ↳ The stitch length continues to become smaller. In the lower end position, the machine sews backwards with the set stitch length.



Information

To sew bartacks manually, press the stitch regulator (1) down. The machine will sew backwards for as long as you keep down the stitch regulator (1).

4.19 Stitch length

4.19.1 Adjusting the stitch length

NOTICE

Property damage may occur!

The machine can be damaged if the adjusting wheels are forced. The machine is designed in such a way that the stitch length at the top adjusting wheel cannot be set to a lower level than at the bottom adjusting wheel.

Do not attempt to force the top adjusting wheel to set a lower stitch length than at the bottom adjusting wheel.


NOTICE

Property damage may occur!

Risk of breakage.

The stitch length at adjusting wheel (2) must NOT be greater than the stitch length at adjusting wheel (3).

Fig. 45: Adjusting the stitch length

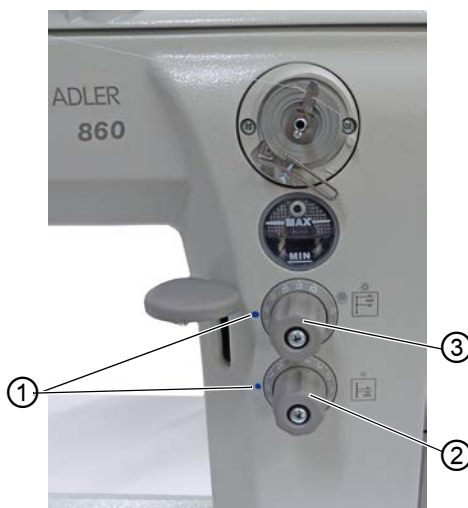

(1) - Marking
(2) - Adjusting wheel

(3) - Adjusting wheel

Depending on its subclass the machine is fitted with either 1 or 2 adjusting wheels for the adjustment of the stitch length. This makes it possible to sew different stitch lengths. The 2nd stitch length (adjusting wheel (3)) is activated using a button on the push button panel.



To adjust the stitch length:

Setting the stitch length on the adjusting wheel (2)

1. Turn the adjusting wheel (2) counterclockwise until you reach the desired stitch length.

The marking (1) on the left of the adjusting wheel indicates the stitch length selected.

Setting the stitch length on the adjusting wheel (3)

1. Turn the adjusting wheel (3) clockwise until you reach the desired stitch length.

The marking (1) on the left of the adjusting wheel indicates the stitch length selected.

4.19.2 Sewing with 2 stitch lengths

NOTICE

Property damage may occur!

The machine can be damaged if the adjusting wheels are forced. The machine is designed in such a way that the stitch length at the top adjusting wheel cannot be set to a lower level than at the bottom adjusting wheel.

Do not attempt to force the top adjusting wheel to set a lower stitch length than at the bottom adjusting wheel.


NOTICE

Property damage may occur!

Risk of breakage.

The stitch length at adjusting wheel (2) must not be greater than the stitch length at adjusting wheel (3).

Fig. 46: Sewing with 2 stitch lengths

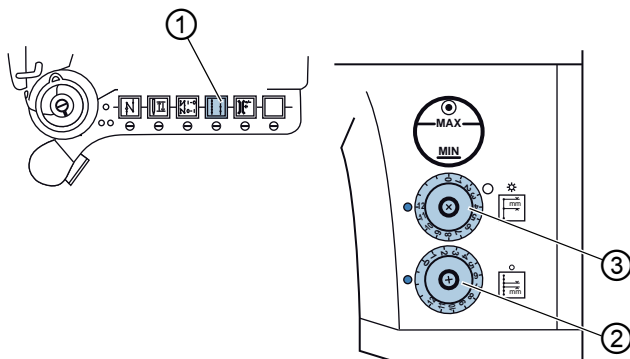

- (1) - Button
(2) - Adjusting wheel

- (3) - Adjusting wheel

Depending on its subclass the machine may be fitted with 2 adjusting wheels for the adjustment of the stitch length. These can be used to sew two different stitch lengths and can be activated with a press of button (1).

The stitch lengths are set using the adjusting wheels (2) and (3).

4.19.3 Removing blocking of the adjusting wheels

WARNING




Risk of injury from moving, cutting or sharp parts!

Crushing, cutting and punctures are possible.

Switch off the machine before you remove the blocking of the adjusting wheels.

Machines with blockable adjusters are used especially in the automotive sector. With these machines, the blocking must be removed before the stitch length can be adjusted.

Fig. 47: Removing blocking of the adjusting wheels

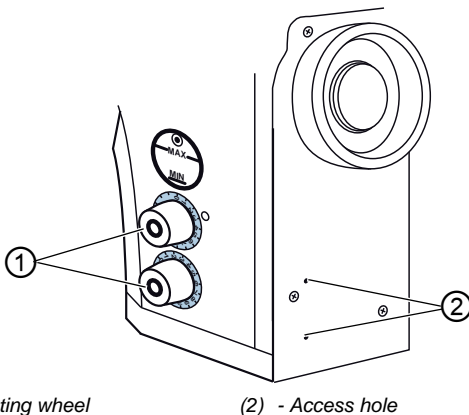

(1) - Adjusting wheel

(2) - Access hole



To remove the blocking of the adjusting wheels:

1. Insert a 3 mm hex key through the access holes (2) and release the blocking screws for the adjusting wheels (1).
2. Set the adjusting wheels (1) again (p. 67).
3. Insert a 3 mm hex key through the access holes (2) and tighten the blocking screws for the adjusting wheels (1).

4.20 Sewing

4.20.1 Pressing the pedal

WARNING




Risk of injury from moving parts!

Crushing injuries may be sustained while lowering the sewing feet.

Do NOT put your hands under the lifted sewing feet.

Fig. 48: Pressing the pedal

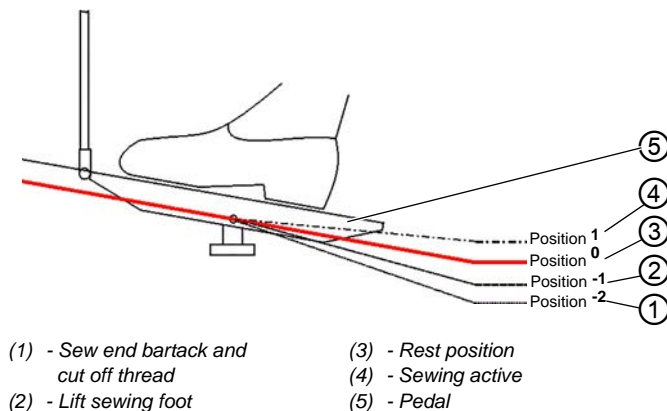

Initial situation

- Pedal in position 0:

✎ The machine is at a standstill, the needle is up, and the sewing feet are down.

Positioning the sewing material



To position the sewing material:

1. Press the pedal (5) halfway back to position -1.
✎ The sewing feet are lifted.
2. Push the sewing material into the initial position.

Sewing



To sew:

1. Press the pedal (5) forward to position **1**.



The machine sews.

The sewing speed increases the further forward the pedal (5) is pressed.

Interrupting sewing



To interrupt sewing:

1. Release the pedal (5) (position **0**).



The machine stops, and needle and sewing feet are down.

Continue sewing



To continue sewing:

1. Press the pedal (5) forward to position **1**.




The machine continues to sew.

Changing the stitch length




To change the stitch length:

1. Switch on the 2nd stitch length using the button for the quick function ( p. 69).

Increasing the thread tension




To increase the thread tension:

1. Switch on the additional tension using the quick function button ( p. 49).

Sewing an intermediate bartack




To sew an intermediate bartack:

1. Reverse sewing with the stitch regulator or the quick function button ( p. 58).

Finishing the seam



To finish the seam:

1. Press the pedal (5) fully back to position **-2**:
 The machine sews the end bartack, and the thread trimmer cuts the thread.
The machine stops, and needle and sewing feet are up.
2. Remove the sewing material.

4.20.2 Sewing with the machine

The following is an example of how to sew with one of the machines.

To complete the operating steps listed below, the machine must possess the following features:

- 1-needle machine
- Thread trimmer
- electropneumatic seam bar tacking and sewing foot lift
- electropneumatic quick stroke adjustment

The following functions have been set at the control panel:


Function	Setting
Start bartack:	ON
End bartack:	ON
Sewing foot position before and after cutting:	DOWN
Needle position before cutting:	DOWN (pedal in 1 st position = pedal in position 0)
Needle position after cutting:	UP (pedal in 2 nd position = pedal in position -2)

The last sewing process is completed with an end bartack and by cutting off the thread.



To sew with the machine:

Preparing to sew

1. Switch on the machine ( p. 20).
 - ↳ The needle is up, and the sewing feet are down. The pedal is in position **0**. The machine is ready for operation.
2. Press the pedal back to position **-1**.
 - ↳ Lift the sewing feet.
3. Place the sewing material at the appropriate position above the throat plate.

Beginning to sew

4. To start sewing, press the pedal forward to position **1**.
- ↳ The machine sews the set start bartack with the programmed number of stitches. Next, the machine keeps sewing at the speed set by pressing the pedal. The speed increases the further you press the pedal forward.

Interrupting sewing

5. To interrupt the sewing process, release the pedal (position **0**).
- ↳ The machine stops in the 1st position, i.e. with the needle and the sewing feet at the bottom position.
6. To resume the sewing process, press the pedal forward to position **1**.

Sewing an intermediate bartack

Fig. 49: Sewing with the machine (1)




(1) - Button (sewing in reverse)

(2) - Button (switching over the stitch length)

(3) - Button (activate auxiliary thread tension)

Fig. 50: Sewing with the machine (2)

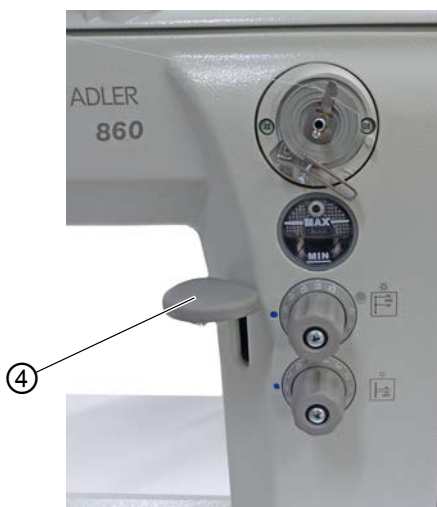

(4) - Stitch regulator

7. To sew an intermediate bartack, press button (1)
OR
Push the stitch regulator (4) down.
- ↳ The machine will sew in reverse for as long as you keep down the button (1) or the stitch regulator (4) (p. 66). Afterwards, the machine keeps sewing at the speed set by pressing the pedal.

Using the 2nd stitch length

8. To use the 2nd (maximum) stitch length during sewing, press button (2) (p. 69).
9. To switch back to the normal stitch length, press button (2) again.

Increasing the thread tension

10. To increase the additional tension during sewing, press button (3) (p. 49).
11. To switch back to the normal needle thread tension, press button (3) again.

Sewing over cross seams

Fig. 51: Sewing with the machine (3)



(5) - Knee button

12. To sew over thick places in the material such as cross seams, activate the maximum sewing foot stroke using the knee button (5).
- ↳ Depending on whether the knee button (5) is operated in push-to-run or hold-to-run mode, press the knee button (5) once or press it and hold it down.
13. To switch the increased sewing foot stroke off, press the knee button (5) again
OR
stop holding it down.

Finishing the seam

14. Press the pedal to position **-2** and keep it there.
- ↳ If activated, the machine will sew the end bartack.
The thread is cut off.
The machine stops in the 2nd position.
The needle and the sewing feet are up.
15. Remove the sewing material.

5 Programming

All machines are equipped with a control, housed below the tabletop, and the control panel OP1000 found at the machine head.

Fig. 52: Programming



(1) - Control panel OP1000

All settings are performed using this control panel.
The control panel is composed of a display and buttons.


Using the control panel you can:

- Use groups of buttons to select machine functions
- Read service and error messages




Information

This chapter describes the machine-specific functions of the OP1000 control panel.

Refer to the  *Instructions for use DAC basic/classic* for further information on the control of the machines and the OP1000 control panel.

 

 

5.1 Buttons on the control panel



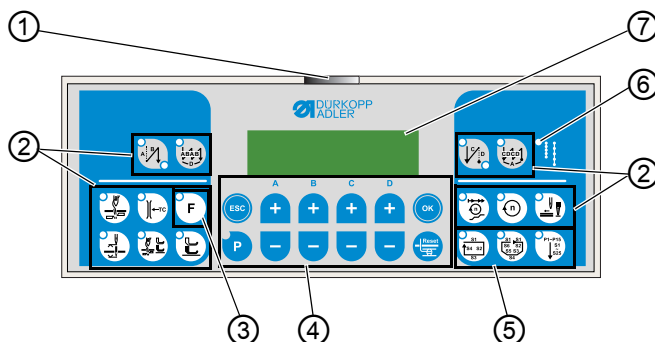






Fig. 53: Buttons on the control panel














 


- | | |
|--------------------------------|---|
| (1) - Power LED | (5) - Seam program button group |
| (2) - Thread button group | (6) - LED for 2 nd stitch length |
| (3) - Function key | (7) - Display |
| (4) - Programming button group | |

OP1000 buttons and functions


Button	Function
Thread button group	
 Start bartack	• Adjusts the start bartack
 Multiple start bartack	• Adjusts the multiple start bartack
 End bartack	• Adjusts the end bartack
 Multiple end bartack	• Adjusts the multiple end bartack

Button	Function
	<p>Thread trimmer</p> <ul style="list-style-type: none"> • Activates or deactivates the thread trimmer
	<p>Thread clamp</p> <ul style="list-style-type: none"> • Activates or deactivates the thread clamp
	<p>Needle position after sewing stop</p> <ul style="list-style-type: none"> • Adjusts the needle position after sewing stop
	<p>Sewing foot lift after thread trimmer</p> <ul style="list-style-type: none"> • Activates or deactivates the sewing foot lift after the thread trimmer
	<p>Sewing foot lift after sewing stop</p> <ul style="list-style-type: none"> • Activates or deactivates the sewing foot lift after sewing stops
	<p>Soft start</p> <ul style="list-style-type: none"> • Activates or deactivates the soft start
	<p>Speed</p> <ul style="list-style-type: none"> • Reduces the motor speed
	<p>Function key</p> <ul style="list-style-type: none"> • Activates or deactivates any stored function
Programming button group	
	<p>ESC</p> <ul style="list-style-type: none"> • Ends parameter mode

Button		Function
	A+	<ul style="list-style-type: none"> Increases parameter Changes user level Selects subprogram
	B+	<ul style="list-style-type: none"> Increases parameter Changes to next higher category Selects subprogram
	C+	<ul style="list-style-type: none"> Increases parameter Selects subprogram
	D+	<ul style="list-style-type: none"> Increases parameter Selects subprogram
	OK	<ul style="list-style-type: none"> Calls parameter or saves it
	P	<ul style="list-style-type: none"> Starts or ends the parameter mode
	A-	<ul style="list-style-type: none"> Decreases parameter Changes user level Selects subprogram

Button		Function
	B-	<ul style="list-style-type: none"> Decreases parameter Changes to next lower category Selects subprogram
	C-	<ul style="list-style-type: none"> Decreases parameter Selects subprogram
	D-	<ul style="list-style-type: none"> Decreases parameter Selects subprogram
	Reset	<ul style="list-style-type: none"> Resets the (piece) counter
Seam program button group		
	Seam program I	<ul style="list-style-type: none"> Activates seam program I
	Seam program II	<ul style="list-style-type: none"> Activates seam program II
	Seam program III	<ul style="list-style-type: none"> Sets seam program III

5.2 Programming a seam path

To program a seam path, you need to set seam program III. For a detailed description, see chapter 5.4.3 **Setting seam program III** in the  *Instructions for use DAC basic/classic*.

5.3 Assigning functions to buttons on the push button panel

Fig. 54: Assigning functions to buttons on the push button panel







The buttons on the push button panel can be assigned different functions. Possible function assignments are, for instance:

- Suppress stitch condensing
- Single stitch
- Needle up/down
- Stroke adjustment



To assign a function to a button on the push button panel:

1. Press the  button.
2. Press and hold the button on the push button panel to which you wish to assign a function.
- ↳ The control panel shows the value currently set for the button.
3. Use +/- to enter the desired value ( *Parameter list 868*).

4. Confirm with .
 5. Press the  button.
- 👉 The machine is ready to sew again.

5.4 Assigning a function to the knee button

Fig. 55: Assigning a function to the knee button




(1) - Toggle switch

(2) - Knee button

The knee button (2) can be assigned 2 different functions. The functions are selected in sewing mode via the position of the toggle switch (1) **(1 or 0)**.







Information

At the factory, the knee button was assigned the switchable sewing foot stroke function in push-to-run and hold-to-run mode ( p. 19). The knee button (2) can also be assigned different functions.



To assign a function to the knee button (2):

1. Press the  button.
2. Set the toggle switch (1) to the desired position (**1** or **0**).
If the toggle switch (1) is, for instance, set to the bottom position, the new function is saved to the **0** position.
3. Keep the knee button (2) pressed for a few seconds.
 flashes.
The display shows a numerical value.
4. Use the buttons **+** or **-** to set the numerical value to the desired value associated with the new function ( *Parameter list 868*).
5. Confirm with .

6 Maintenance

WARNING



Risk of injury from sharp parts!

Punctures and cutting possible.

Prior to any maintenance work, switch off the machine or set the machine to threading mode.

WARNING




Risk of injury from moving parts!

Crushing possible.

Prior to any maintenance work, switch off the machine or set the machine to threading mode.

This chapter describes maintenance work that needs to be carried out on a regular basis to extend the service life of the machine and achieve the desired seam quality.

Advanced maintenance work may only be carried out by qualified specialists ( *Service Instructions*).

Maintenance intervals

Work to be carried out	Operating hours			
	8	40	160	500
Cleaning				
Removing sewing dust and thread residues	●			
Lubricating				
Checking the oil level	●			
Checking the hook lubrication		●		
Servicing the pneumatic system				
Adjusting the operating pressure	●			
Checking the water level in the pressure regulator		●		
Draining the water condensation	●			
Cleaning the filter element				●
Checking the tightness of the system				●

6.1 Cleaning

WARNING



Risk of injury from flying particles!

Flying particles can enter the eyes, causing injury.

Wear safety goggles.

Hold the compressed air gun so that the particles do not fly close to people.

Make sure no particles fly into the oil pan.

NOTICE

Property damage from soiling!

Sewing dust and thread residues can impair the operation of the machine.

Clean the machine as described.

If very fluffy sewing material is being sewn, the machine must be cleaned more frequently.


NOTICE

Property damage from solvent-based cleaners!

Solvent-based cleaners will damage paintwork.

Use only solvent-free substances for cleaning.


Fig. 56: Cleaning (1)

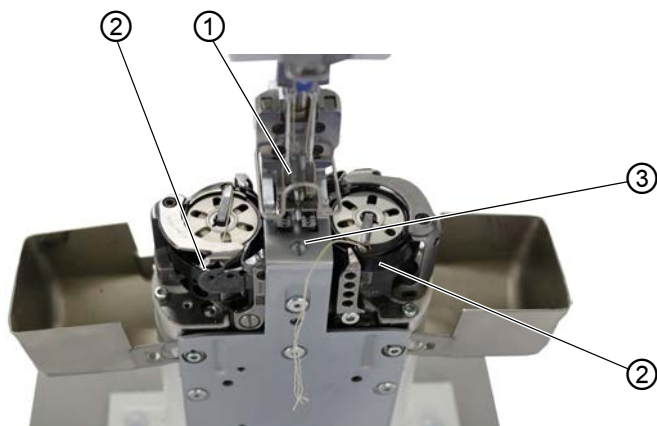

(1) - Area around the needle(s)
(2) - Area around the hook

(3) - Area under the throat plate

Fig. 57: Cleaning (2)

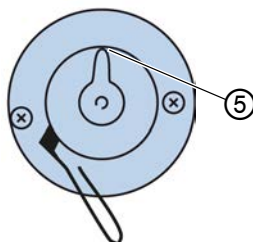


(4) - Knife on the winder

Areas particularly susceptible to soiling:

- Area around the needle (1)
- Area around the hook (2)
- Area under the throat plate (3)
- Sensor of the remaining thread monitor
- Cutter on the winder for the hook thread (4)



Cleaning steps:

1. Switch off the machine ( p. 20).
2. Remove any sewing dust and thread residues using a compressed air gun or a brush.

6.2 Lubricating

CAUTION



Risk of injury from contact with oil!

Oil can cause a rash if it comes into contact with skin.

Avoid skin contact with oil.

If oil has come into contact with your skin, wash the affected areas thoroughly.

NOTICE

Property damage from incorrect oil!

Incorrect oil types can result in damage to the machine.

Only use oil that complies with the data in the instructions.

CAUTION



Risk of environmental damage from oil!

Oil is a pollutant and must not enter the sewage system or the soil.

Carefully collect up used oil.

Dispose of used oil and oily machine parts in accordance with national regulations.

The machine is equipped with a central oil-wick lubrication system. The bearings are supplied from the oil reservoir.

For topping off the oil reservoir, use only lubricating oil **DA 10** or oil of equivalent quality with the following specifications:

- Viscosity at 40 °C: 10 mm²/s
- Flash point: 150 °C

You can order the lubricating oil from our sales offices using the following part numbers.

Container	Part no.
250 ml	9047 000011
1 l	9047 000012
2 l	9047 000013
5 l	9047 000014


6.2.1 Checking the oil level



Proper setting

The oil level is between the minimum level marking and the maximum level marking.

Fig. 58: Checking the oil level (1)

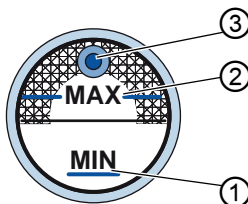

- (1) - Minimum level marking
(2) - Maximum level marking

- (3) - Refill opening



To check the oil level:

1. Check the oil level indicator at the inspection glass every day. If the lamp behind the inspection glass lights up red, the machine is not sufficiently supplied with oil.

Fig. 59: Checking the oil level (2)



2. If the oil level is below the minimum level marking (1): Pour oil through the refill opening (3) but no higher than the maximum level marking (2).



Important

The lamp behind the inspection glass will not go out until the oil has been topped off and the machine was switched off and back on again (📖 p. 20).

6.2.2 Adjusting the hook lubrication

CAUTION



Risk of injury!

Crushing and puncture possible.

Only lubricate the hook when the machine is switched off. Carry out function tests with utmost caution when the sewing machine is switched on.

The approved oil quantity for hook lubrication is a factory specification.



Proper setting

To check the hook lubrication:

1. Hold a piece of blotting paper next to the hook.
 2. Allow the machine to run without thread and sewing material for 10 seconds with the sewing feet lifted and at a high speed.
- ✎ The blotting paper will show a thin strip of oil when sewing is complete.

Fig. 60: Adjusting the hook lubrication



(1) - Screw



To adjust the hook lubrication:

1. Turn the screw (1):
 - counterclockwise: more oil is released
 - clockwise: less oil is released



Important

The released amount of oil does not change until the operating time has run a few minutes. Sew for several minutes before you check the setting again.



Information

The right and the left hook are designed in exactly the same way, but they are mirror images of each other.

6.3 Servicing the pneumatic system

6.3.1 Adjusting the operating pressure

NOTICE


Property damage from incorrect adjustment!

Incorrect operating pressure can result in damage to the machine.

Ensure that the machine is only used when the operating pressure is set correctly.




Proper setting

Refer to the **Technical Data** ( p. 139) chapter for the permissible operating pressure. The operating pressure cannot deviate by more than ± 0.5 bar.

Check the operating pressure on a daily basis.

Fig. 61: Adjusting the operating pressure

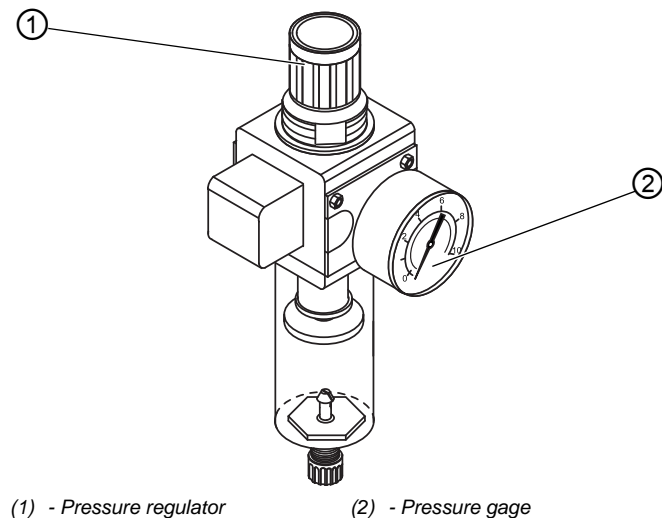



To adjust the operating pressure:

1. Pull the pressure regulator (1) up.
2. Turn the pressure regulator until the pressure gage (2) indicates the proper setting:
 - Increase pressure = turn clockwise
 - Reduce pressure = turn counterclockwise
3. Push the pressure regulator (1) down.

6.3.2 Draining the water condensation

NOTICE

Property damage from excess water!

Excess water can cause damage to the machine.

Drain water as required.

Water condensation accumulates in the water separator (2) of the pressure regulator.




Proper setting

Water condensation must not rise up to the level of the filter element (1).

Check the water level in the water separator (2) on a daily basis.

Fig. 62: Draining the water condensation

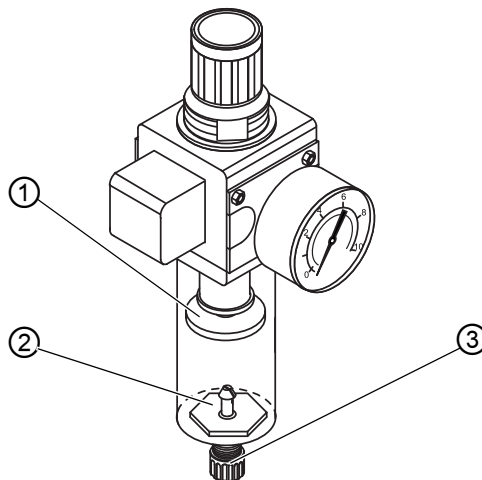

(1) - Filter element
(2) - Water separator

(3) - Drain screw



To drain water condensation:

1. Disconnect the machine from the compressed air supply.
2. Place the collection tray under the drain screw (3).
3. Loosen the drain screw (3) completely.
4. Allow water to drain into the collection tray.

5. Tighten the drain screw (3).
6. Connect the machine to the compressed air supply.

6.3.3 Cleaning the filter element


NOTICE

Damage to the paintwork from solvent-based cleaners!

Solvent-based cleaners damage the filter.

Use only solvent-free substances for washing out the filter tray.

Fig. 63: Cleaning the filter element

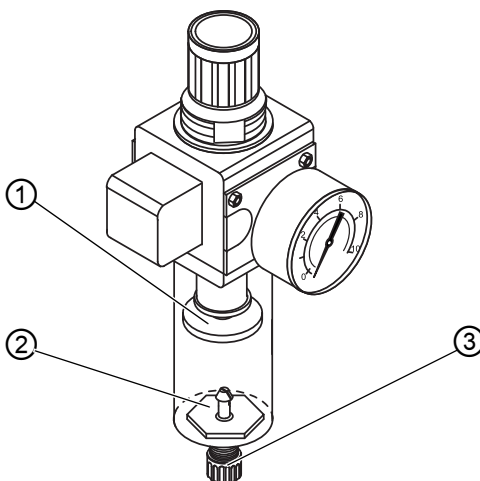


- (1) - Filter element
(2) - Water separator

- (3) - Drain screw



To clean the filter element:

1. Disconnect the machine from the compressed air supply.
2. Drain the water condensation ( p. 97).
3. Loosen the water separator (2).
4. Unscrew the filter element (1).
5. Blow out the filter element (1) using the compressed air gun.

6. Wash out the filter tray using benzine.
7. Tighten the filter element (1).
8. Tighten the water separator (2).
9. Tighten the drain screw (3).
10. Connect the machine to the compressed air supply.

6.4 Parts list

A parts list can be ordered from Dürkopp Adler. Or visit our website for further information at:

www.duerkopp-adler.com



7 Setup

WARNING



Risk of injury from cutting parts!

Cutting injuries may be sustained while unpacking and setting up the machine.

Only qualified specialists may set up the machine.
Wear safety gloves

WARNING



Risk of injury from moving parts!

Crushing injuries may be sustained while unpacking and setting up the machine.

Only qualified specialists may set up the machine.
Wear safety shoes.

7.1 Checking the scope of delivery

The scope of delivery depends on your specific order.

Check that the scope of delivery is correct after taking delivery.


7.2 Removing the transport locks

Remove all transport locks before setting up the machine:

- Lashing straps and wooden blocks from the machine head
- If applicable, lashing straps and wooden blocks from the table-top and the stand
- If applicable, restrain block and straps from the sewing motor
- All pieces of Styrofoam and cardboard

7.3 Assembling the stand

Fig. 64: Assembling the stand

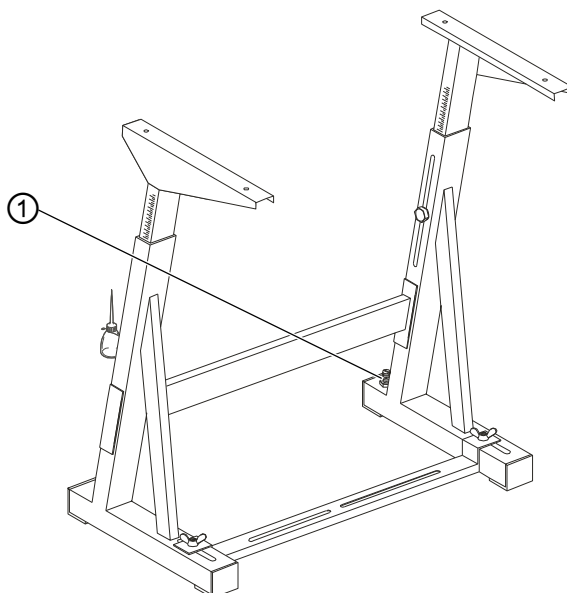

(1) - Adjusting wheel




To assemble the stand:



1. Assemble the stand as shown in the figure.
2. **Important:** Turn the adjusting wheel (1) so that the stand has even contact with the ground.




Information

The working height can be set at the stand ( p. 114).

7.4 Assembling the control

The machines require that the DAC classic control be assembled under the tabletop.

Fig. 65: Assembling the control

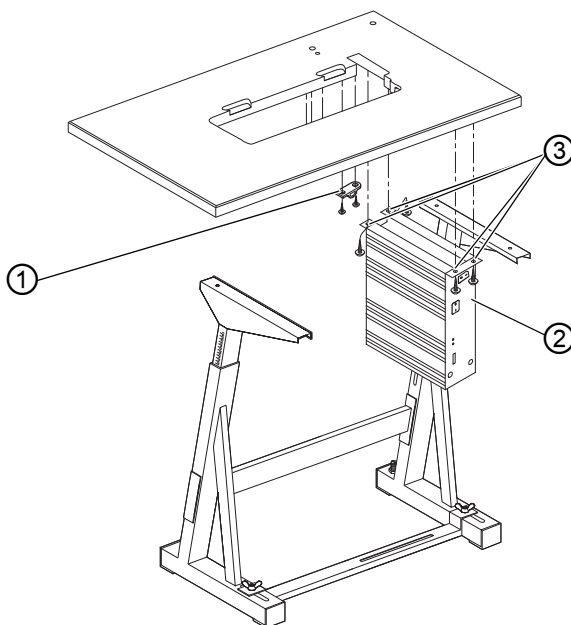

(1) - Strain relief mechanism
(2) - Control

(3) - Screw holder




To assemble the control:

1. Screw the control (2) onto the 4 screw holders (3) under the tabletop.
2. Clamp the power cable of the control (2) into the strain relief mechanism (1).
3. Screw the strain relief mechanism (1) in place under the tabletop using 2 screws.

7.5 Completing the tabletop

To complete the tabletop, you must assemble the tilt protection device, the drawer, the oil pan, the reel stand and the protection parts.

Fig. 66: Completing the tabletop (1)

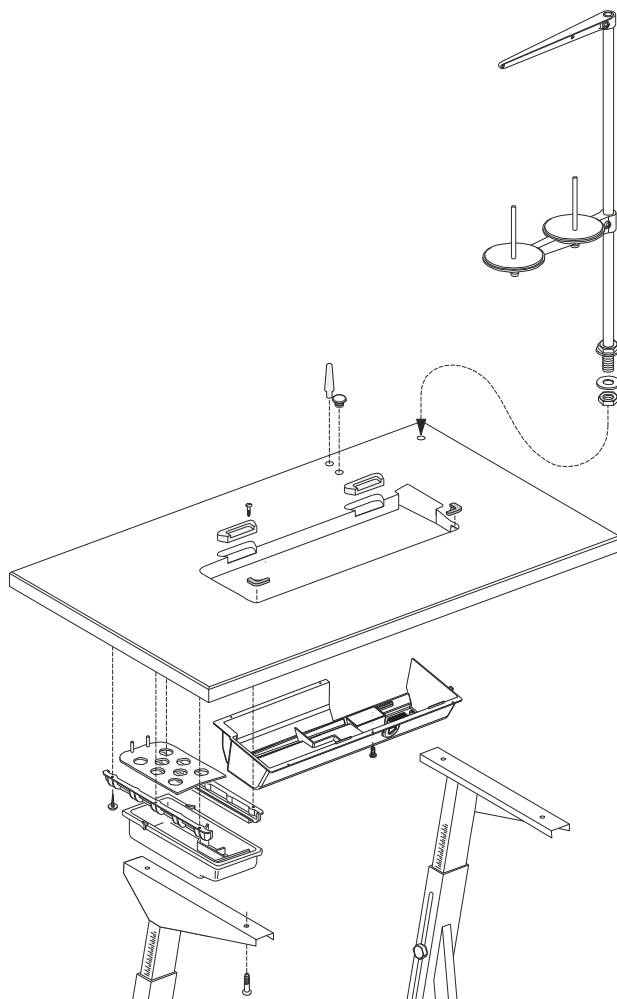


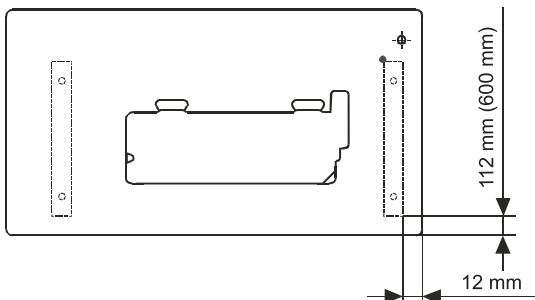
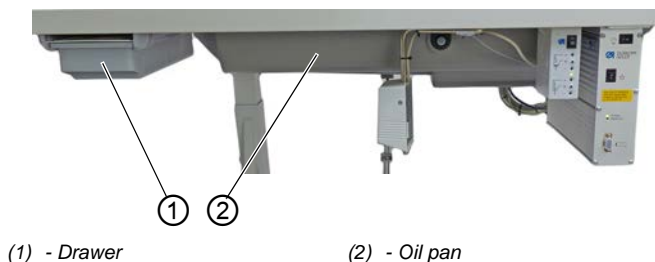
Ensure that the tabletop has sufficient load-bearing capacity and strength. If you want to make your own tabletop, use the dimensions given in the tabletop drawing in the **Appendix** ( p. 143) as a template.

Fig. 67: Completing the tabletop (2)




Drawer and oil pan

Fig. 68: Completing the tabletop (3)




To assemble the drawer and the oil pan:

1. Assemble the drawer (1) on the left under the tabletop.
 2. Assemble the oil pan (2) under the tabletop.
-  The stand must be assembled between the drawer (1) and the oil pan (2).

Protection parts

Fig. 69: Completing the tabletop (4)

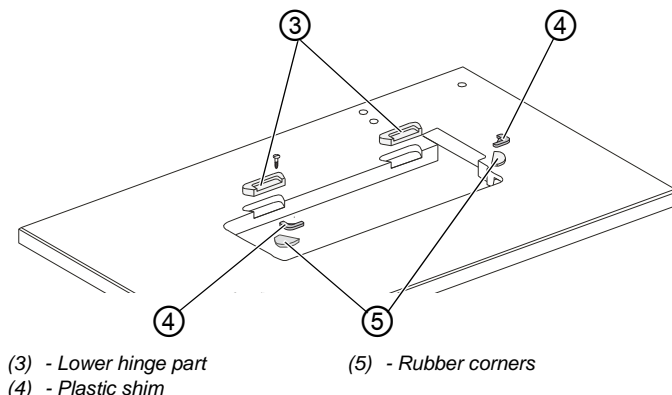


The rubber corners (5) serve the following functions:

- Protecting the tabletop and the machine head
- Ensuring that the machine head is securely seated in the tabletop cutout



Information

The plastic shims (4) are not required unless the machine head is supposed to be set up in a slanted position ( p. 111).

Do NOT insert the plastic shims (4) if the machine head is supposed to be set up straight inside the tabletop cutout.



To prepare the tabletop cutout for the machine head:

1. Insert the plastic shims (4) into the front corners inside the tabletop cutout if the machine is supposed to be set up in a slanted position.

The tall edge must face towards the rear, while the flat edge must face forward.

2. Insert the rubber corners (5) into the front corners in the tabletop cutout.

3. Insert the lower hinge parts (3) into the hinge slots in the tabletop cutout on the rear left and right.

Tilt protection device

Fig. 70: Completing the tabletop (5)



(6) - Tilt protection device

(7) - Plug




To assemble the tilt protection device:

1. Assemble the tilt protection device (6) in the designated slot of the tabletop.
2. Screw the plug (7) into the designated slot of the tabletop.

Reel stand

Fig. 71: Completing the tabletop (6)

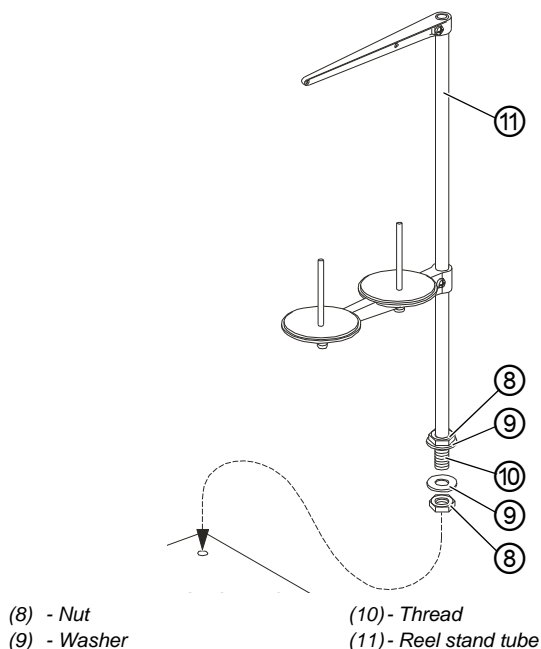

Information

The reel stand shown belongs to a 1-needle machine. The reel stand on 2-needle machines is fitted with a 2nd thread reel holder with 2 additional plates for the hook thread reel.



To assemble the reel stand:

1. Place a washer (9) onto the hole in the tabletop.
2. Screw in a nut (8) until you reach the end of the thread (10).
3. Insert the reel stand tube (11) through the washer (9) and into the hole in the tabletop.
4. Slide the 2nd washer (9) from the bottom onto the thread (10).

5. Screw a second nut (8) from the bottom onto the thread at the end of the reel stand tube (11).
- ✎ The reel stand is now securely assembled to the tabletop.

7.6 Assembling the pedal and setpoint device

Fig. 72: Assembling the pedal and setpoint device (1)



(1) - Pedal


(2) - Cross strut



To assemble the pedal:

1. Fit the pedal (1) on the cross strut (2) and align it in such a way that the middle of the pedal is under the needle.
2. Tighten the pedal (1) on the cross strut (2).

Fig. 73: Assembling the pedal and setpoint device (2)

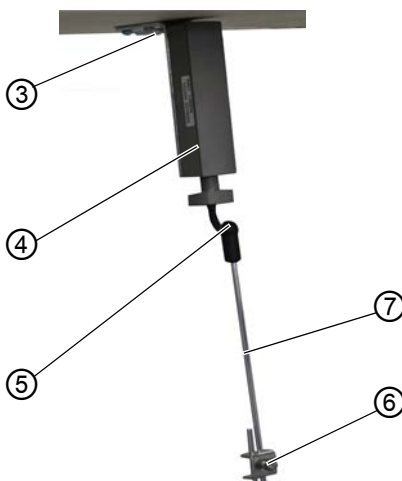


- (3) - Bracket
(4) - Setpoint device
(5) - Ball joints

- (6) - Screw
(7) - Pedal rod



3. Screw the bracket (3) under the tabletop so that the pedal rod (7) runs to the pedal (1) at right-angles to the setpoint device (4).
4. Screw the setpoint device (4) onto the bracket (3).
5. Attach the pedal rod (7) with the ball joints (5) to the setpoint device (4) and to the pedal (1).
6. Slightly loosen the screw (6).

Fig. 74: Assembling the pedal and setpoint device (3)

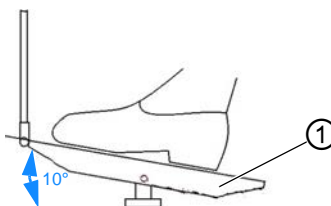

7. Pull the pedal rod (7) to the correct length:



- Proper setting:** 10° inclination with pedal (1) released.
8. Tighten the screw (6).

7.7 Inserting the machine head

WARNING



Risk of crushing from moving parts!

The machine head is very heavy.
Crushing possible.

Ensure that your hands are not jammed when
inserting the machine head.


NOTICE

Property damage may occur!

Cable may sustain damage and impair the operation of
the machine.

Always lay the cables so as not to create any chafing or
pinching points.

Fig. 75: Inserting the machine head (1)

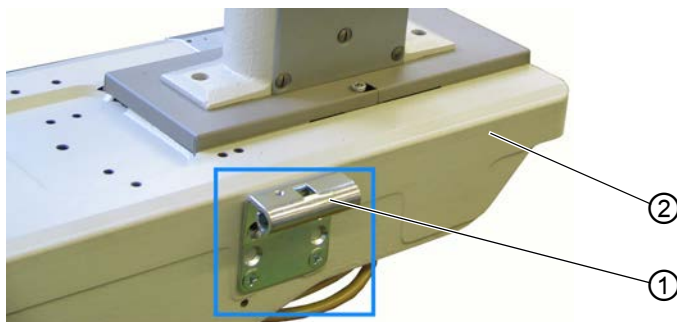

(1) - Hinge

(2) - Machine head



To insert the machine head (2):


1. Tighten the hinges (1) at the rear of the machine head (2):
 - To set up the machine head (2) straight: Tighten the hinges (1) at the topmost position.
 - To set up the machine head (2) slanted: Tighten the hinges (1) at the bottommost position.



Important


If the machine head is supposed to be set up in a slanted position, insert the plastic shims into the tabletop cutout (📖 p. 106).

Fig. 76: Inserting the machine head (2)

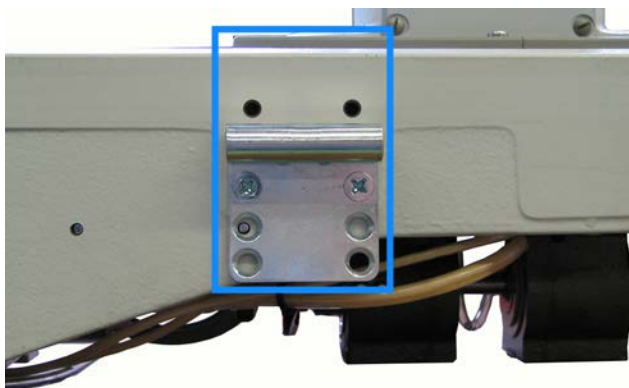

2. Guide the cables through the tabletop with great care so as not to kink or pinch them.
3. Insert the machine head (2) vertically into the tabletop cutout.

Fig. 77: Inserting the machine head (4)

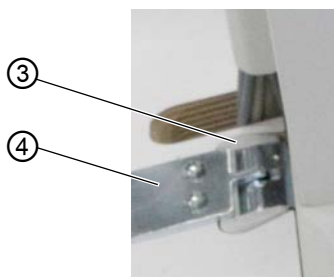

(3) - Lower hinge part

(4) - Tilt protection device



4. Insert the hinges (1) into the lower hinge parts (3).
5. Use the tilt protection device (4) to secure the machine head at the right hinge (1).

Fig. 78: Inserting the machine head (5)



(5) - Tilt protection device

The machine head is secured further with the tilt protection device (5).

7.8 Adjusting the working height

WARNING



Risk of crushing!

The tabletop can sink under its own weight when the screws on the stand bars are loosened.

Ensure that your hands are not jammed when loosening the screws.

CAUTION




Risk of musculoskeletal damage from incorrect setting!

The operator can sustain musculoskeletal damage if failing to comply with the ergonomic requirements.

Adjust the working height to the body height of the person who will operate the machine.

Fig. 79: Assembling the stand

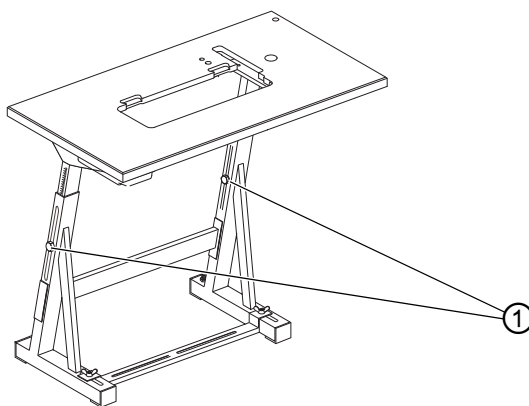

(1) - Screw

The working height ranges between 750-900 mm, measured from the top edge of the tabletop.



To adjust the working height:


1. Loosen both screws (1).
2. Set the tabletop to the desired working height.

Make sure the tabletop remains horizontal and does not tilt.

3. Tighten both screws (1).

7.9 Adjusting the pedal

Fig. 80: Adjusting the pedal

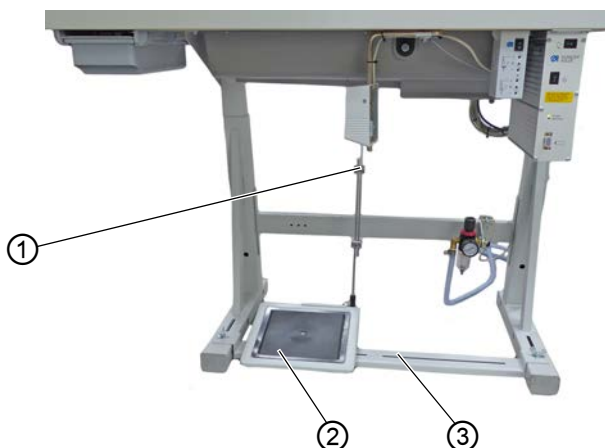


(1) - Screw
(2) - Pedal

(3) - Cross strut

The pedal (2) must be tilted to a degree that allows the user to move the pedal forward and backward without a problem.




To set the pedal properly:

1. Loosen the screw (1).
2. Set the pedal (2) to the proper position on the cross strut (3)
( p. 109).
3. Tighten the screw (1).

7.10 Assembling the control panel

All machines are equipped with the OP1000 control panel.

Fig. 81: Assembling the control panel

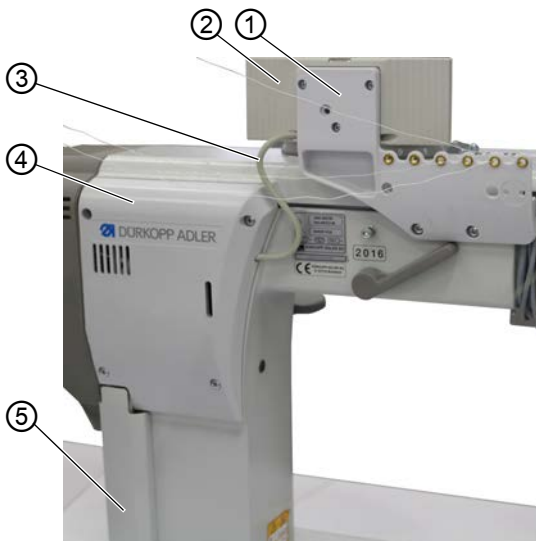

- | | |
|------------------------|--------------------------|
| (1) - Mounting bracket | (4) - Cover |
| (2) - Control panel | (5) - Cover (cable duct) |
| (3) - Connecting cable | |




To assemble the control panel:

1. Tighten the mounting bracket (1) on the machine head.
2. Remove cover (4).
3. Remove the cover from the cable duct (5).
4. Tighten the control panel (2) on the mounting bracket (1).
5. Guide the connecting cable (3) behind covers (4) and (5) and down through the tabletop cutout towards the control.
6. Assemble cover (4) and cover (5).

Make sure not to damage the connecting cable (3) or the other cables.

7.11 Assembling the knee button

Fig. 82: Assembling the knee button

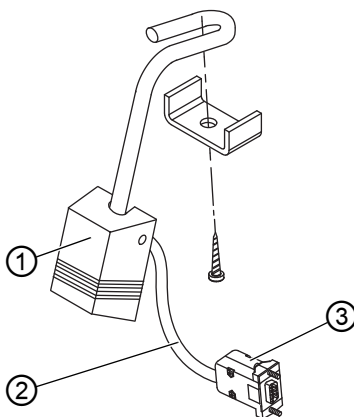

(1) - Knee button

(2) - Connecting cable

(3) - Plug




To assemble the knee button:

1. Screw the knee button (1) in front of the oil pan firmly in place under the tabletop.
2. Guide the connecting cable (2) to the back between the oil pan and the control.
3. Insert the plug (3) of the connecting cable (2) into the socket of the control.

7.12 Assembling the oil extraction line

Fig. 83: Assembling the oil extraction line (1)

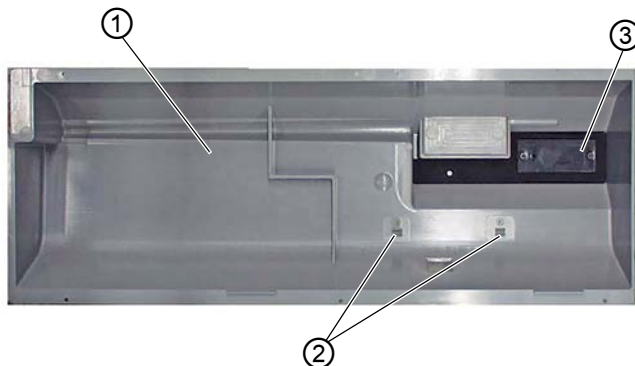

(1) - Oil pan

(2) - Tube holder

(3) - Cover

Fig. 84: Assembling the oil extraction line (2)



(4) - Oil extraction line

(5) - Cover



To assemble the oil extraction line:

1. Tilt the machine head.
2. Remove the plug at the end of the oil extraction line (4).
3. Slip the end of the oil extraction line onto the adapter on the cover (3).
4. Clip the oil extraction line (4) into the tube holder (2).
5. Screw the cover (5) to the base plate.

7.13 Electrical connection

DANGER



Risk of death from live components!

Unprotected contact with electricity can result in serious injuries or death.

Only qualified specialists may perform work on electrical equipment.



Important

The voltage on the type plate of the sewing motor must correspond to the mains voltage.

7.14 Establishing equipotential bonding

NOTICE

Property damage may occur!

Crushing and cable breakage possible.

When laying the grounding wire, ensure that the wire is not pinched.

Fig. 85: Establishing equipotential bonding



(1) - Grounding wire

(2) - Tab connector

The grounding wire conducts away any static charging of the machine head.

The grounding wire is included in the accessory pack for the machine.



To establish equipotential bonding:

1. Plug in the grounding wire (1) with the tab connector (2) at the designated position on the right of the machine head.
2. Tighten the grounding wire (1) to the control at the designated position (top right).

7.15 Pneumatic connection

NOTICE

Property damage from oily compressed air!

Oil particles in the compressed air can cause malfunctions of the machine and soil the sewing material.

Ensure that no oil particles enter the compressed air supply.

NOTICE

Property damage from incorrect adjustment!

Incorrect system pressure can result in damage to the machine.

Ensure that the machine is only used when the system pressure is set correctly.

The pneumatic system of the machine and of the additional equipment must be supplied with dry and oil-free compressed air. The supply pressure must lie between 8 and 10 bar.

7.15.1 Assembling the compressed air maintenance unit



To assemble the compressed air maintenance unit:

1. Connect the connection hose ($\varnothing = 9$ mm) to the compressed air supply using a hose coupling R 1/4".

7.15.2 Adjusting the operating pressure

NOTICE

Property damage from incorrect adjustment!

Incorrect operating pressure can result in damage to the machine.

Ensure that the machine is only used when the operating pressure is set correctly.



Proper setting


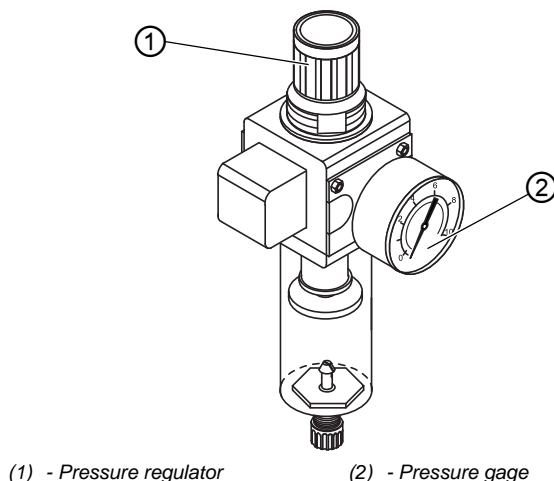
Refer to the **Technical Data** ( p. 139) chapter for the permissible operating pressure. The operating pressure cannot deviate by more than ± 0.5 bar.

Fig. 86: Adjusting the operating pressure






To adjust the operating pressure:

1. Pull the pressure regulator (1) up.
2. Turn the pressure regulator until the pressure gage (2) indicates the proper setting:
 - Increase pressure = turn clockwise
 - Reduce pressure = turn counterclockwise
3. Push the pressure regulator (1) down.

7.16 Checking the lubrication

All wicks and felt bits of the machine head are soaked in oil at the factory. This oil is conveyed to the reservoir during use. This is why you should avoid filling too much oil during initial filling.

Fig. 87: Checking the lubrication

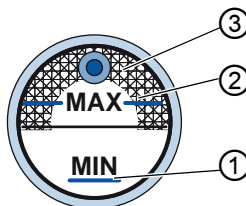


- (1) - Minimum level marking
(2) - Maximum level marking

(3) - Inspection glass



To check the lubrication:

1. Sew with the machine for approx. 1 minute.
2. Check at the inspection glass (3) whether the warning indicator is lit red or the oil level has dropped below the minimum marking (1).
3. If this is the case, top off oil ( p. 91).

7.17 Performing a test run

When setup is complete, perform a test run to check the functionality of the machine.

8 Decommissioning

WARNING



Risk of injury from a lack of care!

Serious injuries may occur.

ONLY clean the machine when it is switched off.
Allow ONLY trained personnel to disconnect the machine.

CAUTION



Risk of injury from contact with oil!

Oil can cause a rash if it comes into contact with skin.

Avoid skin contact with oil.

If oil has come into contact with your skin, wash the affected areas thoroughly.



To decommission the machine:

1. Switch off the machine.
2. Unplug the power plug.
3. If applicable, disconnect the machine from the compressed air supply.
4. Remove residual oil from the oil pan using a cloth.
5. Cover the control panel to protect it from soiling.
6. Cover the control to protect it from soiling.
7. Cover the entire machine if possible to protect it from contamination and damage.

9 Disposal

CAUTION



Risk of environmental damage from improper disposal!

Improper disposal of the machine can result in serious environmental damage.

ALWAYS comply with the national regulations regarding disposal.



The machine must not be disposed of in the normal household waste.

The machine must be disposed of in a suitable manner in accordance with all applicable national regulations.

When disposing of the machine, be aware that it consists of a range of different materials (steel, plastic, electronic components, etc.). Follow the national regulations when disposing these materials.

10 Troubleshooting

10.1 Customer Service

Contact for repairs and issues with the machine:

Dürkopp Adler GmbH

Potsdamer Str. 190
33719 Bielefeld, Germany

Tel. +49 (0) 180 5 383 756

Fax +49 (0) 521 925 2594

Email: service@duerkopp-adler.com

Internet: www.duerkopp-adler.com




10.2 Messages of the software

Please contact customer service if an error occurs that is not described here. Do not attempt to correct the error yourself.

10.2.1 Information messages

Information	Possible cause	Remedial action
1203	Position not reached (during thread cutting, reversal, etc.)	<ul style="list-style-type: none"> • Check the controller settings and change them if required; make mechanical changes to the machine (e.g. thread trimmer, setting for belt tension, etc.) • Check position (thread lever at top dead center)
2020	DACextension box not responding	<ul style="list-style-type: none"> • Check connection cables • Check LEDs of DACextension box • Software update
2021	Sewing motor encoder plug (Sub-D, 9-pin) not connected to DACextension box	<ul style="list-style-type: none"> • Connect encoder cable to DACextension box using the correct connection
2120	DA stepper card 1 not responding	<ul style="list-style-type: none"> • Check connection cables • Check LEDs of DACextension box • Software update
2121	DA stepper card 1 encoder plug (Sub-D, 9-pin) not connected	<ul style="list-style-type: none"> • Connect encoder cable to the control, use correct connection
2122	DA stepper card 1 rotor position not found	<ul style="list-style-type: none"> • Check connection cables • Check stepper motor 1 for stiff movement
2220	DA stepper card 2 not responding	<ul style="list-style-type: none"> • Check connection cables • Check LEDs of DACextension box • Software update
2221	DA stepper card 2 encoder plug (Sub-D, 9-pin) not connected	<ul style="list-style-type: none"> • Connect encoder cable to the control, use correct output

Information	Possible cause	Remedial action
2222	DA stepper card 2 rotor position not found	<ul style="list-style-type: none"> • Check connection cables • Check stepper motor 2 for stiff movement
3103	Low voltage warning (1 st threshold) Mains voltage < 180 V AC	<ul style="list-style-type: none"> • Check mains voltage • Stabilize the mains voltage • Use generator
3108	Speed limited due to insufficient mains voltage	<ul style="list-style-type: none"> • Check mains voltage
3150	Maintenance necessary	<ul style="list-style-type: none"> • Information on lubricating the machine  <i>Service Instructions</i>
3155	No release for sewing process	<ul style="list-style-type: none"> • Parameter t 51 20-t 51 33 = 25 • Input signal for sewing process release required
3160	Stitch loosening device	<ul style="list-style-type: none"> • Stitch loosening cannot be performed
3215	Bobbin stitch counter (info value 0 reached)	<ul style="list-style-type: none"> • Change bobbin, set counter value • Press counter reset button
3216	Remaining thread monitor left	<ul style="list-style-type: none"> • Change the left bobbin
3217	Remaining thread monitor right	<ul style="list-style-type: none"> • Change the right bobbin
3218	Remaining thread monitor left and right	<ul style="list-style-type: none"> • Change the left and right bobbin
3223	Skip stitch detected	
3224	Bobbin failed to rotate	

Information	Possible cause	Remedial action
6360	No valid data on external EEPROM (internal data structures are not compatible with the external data storage device)	<ul style="list-style-type: none"> • Software update
6361	No external EEPROM connected	<ul style="list-style-type: none"> • Connect machine ID
6362	No valid data on internal EEPROM (internal data structures are not compatible with the external data storage device)	<ul style="list-style-type: none"> • Check machine ID connection • Switch off the control, wait until the LEDs are off, and then switch the control on again • Software update
6363	No valid data on internal and external EEPROM (software version is not compatible with the internal data storage device, emergency operating features only)	<ul style="list-style-type: none"> • Check machine ID connection • Switch off the control, wait until the LEDs are off, and then switch the control on again • Software update
6364	No valid data on internal EEPROM and no external EEPROM connected (the internal data structures are not compatible with the external data storage device, emergency operating features only)	<ul style="list-style-type: none"> • Check machine ID connection • Switch off the control, wait until the LEDs are off, and then switch the control on again • Software update
6365	Internal EEPROM defective	<ul style="list-style-type: none"> • Replace control
6366	Internal EEPROM defective and external data not valid (emergency operating features only)	<ul style="list-style-type: none"> • Replace control
6367	Internal EEPROM defective and external EEPROM not connected (emergency operating features only)	<ul style="list-style-type: none"> • Replace control

Information	Possible cause	Remedial action
7202	DACextension box boot error	<ul style="list-style-type: none"> • Check connection cables • Software update • Replace DACextension box
7203	Checksum error during update	<ul style="list-style-type: none"> • Check connection cables • Software update • Replace DACextension box
7212	DA stepper card 1 boot error	<ul style="list-style-type: none"> • Check connection cables • Software update • Replace DACextension box
7213	Checksum error occurred while updating DA stepper card 2	<ul style="list-style-type: none"> • Check connection cables • Software update • Replace DACextension box
7222	DA stepper card 2 boot error	<ul style="list-style-type: none"> • Check connection cables • Software update • Replace DACextension box
7223	Checksum error occurred while updating DA stepper card 2	<ul style="list-style-type: none"> • Check connection cables • Software update • Replace DACextension box
7801	Software version error (DAC classic only; only the functions of the DAC basic will remain available)	<ul style="list-style-type: none"> • Software update • Replace control
7802	Software update error (DAC classic only; only the functions of the DAC basic will remain available)	<ul style="list-style-type: none"> • Software update • Replace control


Information	Possible cause	Remedial action
7803	Communication error (DAC classic only; only the functions of the DAC basic will remain available)	<ul style="list-style-type: none"> • Restart of the control • Software update • Replace control

10.2.2 Error Messages

Code	Error/ warning	Possible cause	Remedial action
1000	Error	Sewing motor encoder plug (Sub-D, 9-pin) not connected	<ul style="list-style-type: none"> • Connect encoder cable to the control, use correct connection
1001	Error	Sewing motor error: Sewing motor plug (AMP) not connected	<ul style="list-style-type: none"> • Check connection and plug in, if necessary • Test sewing motor phases ($R = 2.8 \Omega$, high impedance to PE) • Replace encoder • Replace sewing motor • Replace control
1002	Error	Sewing motor insulation fault	<ul style="list-style-type: none"> • Check sewing motor phase and PE for low-impedance connection • Replace encoder • Replace sewing motor
1004	Error	Sewing motor error: Incorrect sewing motor direction of rotation	<ul style="list-style-type: none"> • Replace encoder • Check plug assignment and change, if necessary • Check wiring in machine distributor and change it, if necessary • Test sewing motor phases and check for correct value
1005	Error	Sewing motor blocked	<ul style="list-style-type: none"> • Eliminate stiff movement in the machine • Replace encoder • Replace sewing motor


 






Code	Error/ warning	Possible cause	Remedial action
1006	Error	Maximum speed exceeded	<ul style="list-style-type: none"> • Replace encoder • Perform reset • Check class (t 51 04)
1007	Error	Error in the reference run	<ul style="list-style-type: none"> • Replace encoder • Eliminate stiff movement in the machine
1008	Error	Encoder error	<ul style="list-style-type: none"> • Replace encoder
1010	Error	External synchronizer plug (Sub-D, 9-pin) not connected	<ul style="list-style-type: none"> • Connect cable of external synchronizer to control; use correct connection (Sync) • Only required for machines with transmission!
1011	Error	Encoder Z pulse missing	<ul style="list-style-type: none"> • Switch off the control, adjust the handwheel, and switch the control on again • If error is not corrected, check encoder
1012	Error	Synchronizer fault	<ul style="list-style-type: none"> • Replace synchronizer
1052	Error	Sewing motor overcurrent, internal current increase >25 A	<ul style="list-style-type: none"> • Check selection of class • Replace control • Replace sewing motor • Replace encoder
1053	Error	Sewing motor overvoltage	<ul style="list-style-type: none"> • Check selection of class • Replace control
1054	Error	Internal short circuit	<ul style="list-style-type: none"> • Replace control
1055	Error	Sewing motor overload	<ul style="list-style-type: none"> • Eliminate stiff movement in the machine • Replace encoder • Replace sewing motor




 






Code	Error/ warning	Possible cause	Remedial action
2101	Error	DA stepper card 1 reference run timeout	<ul style="list-style-type: none"> • Check reference sensor
2103	Error	DA stepper card 1 step losses	<ul style="list-style-type: none"> • Check for stiff movement
2155	Error	DA stepper card 1 overload	<ul style="list-style-type: none"> • Check for stiff movement
2201	Error	DA stepper card 2 reference run timeout	<ul style="list-style-type: none"> • Check reference sensor
2203	Error	DA stepper card 2 step losses	<ul style="list-style-type: none"> • Check for stiff movement
2255	Error	DA stepper card 2 overload	<ul style="list-style-type: none"> • Check for stiff movement
3100	Error	AC-RDY timeout, intermediate circuit voltage did not reach the defined threshold in the specified time	<ul style="list-style-type: none"> • Check mains voltage • If the mains voltage is OK, replace the control
3101	Error	High voltage fault, mains voltage > 290 V for an extended period	<ul style="list-style-type: none"> • Check mains voltage, if nominal voltage is continuously exceeded • stabilize it or use a generator
3102	Error	Low voltage failure (2 nd threshold), mains voltage < 150 V AC	<ul style="list-style-type: none"> • Check mains voltage • Stabilize the mains voltage • Use generator
3104	Warning	Pedal is not in position 0	<ul style="list-style-type: none"> • When switching the control on, take your foot off the pedal
3105	Error	U24 V short circuit	<ul style="list-style-type: none"> • Disconnect 37-pin plug • Replace control if error is not corrected • Test inputs/outputs for 24 V short circuit

Code	Error/ warning	Possible cause	Remedial action
3106	Error	U24 V (I ² T) overload	<ul style="list-style-type: none"> • One or several magnets defective
3107	Error	Pedal not connected	<ul style="list-style-type: none"> • Connect analog pedal
3109	Warning	Operation lock	<ul style="list-style-type: none"> • Check tilt sensor on machine
3151	Warning	Maintenance necessary (operation cannot continue unless parameter t 51 14 is reset)	<ul style="list-style-type: none"> • Service is urgently required  <i>Service Instructions</i>
6353	Error	Internal EEPROM communication error	<ul style="list-style-type: none"> • Switch off the control • Wait until the LEDs are off • Switch the machine back on
6354	Error	External EEPROM communication error	<ul style="list-style-type: none"> • Switch off the control • Wait until the LEDs are off • Check machine ID connection • Switch the control back on
8401	Error	Watchdog	<ul style="list-style-type: none"> • Software update • Machine ID reset • Replace control

Code	Error/ warning	Possible cause	Remedial action
8402-8405	Error	Internal error	<ul style="list-style-type: none"> • Software update • Machine ID reset • Replace control
8406	Error	Checksum error	<ul style="list-style-type: none"> • Software update • Replace control
8501	Error	Software protection	<ul style="list-style-type: none"> • Always use the DA tool for software updates

10.3 Errors in sewing process

Error	Possible causes	Remedial action
Unthreading at seam beginning	Needle thread tension is too firm	Check needle thread tension  p. 45
Thread breaking	Needle thread and hook thread have not been threaded correctly	Check threading path  p. 19
	Needle is bent or sharp-edged	Replace the needle  p. 22
	Needle is not inserted correctly into the needle bar	Insert the needle correctly into the needle bar  p. 22
	The thread used is unsuitable	Use recommended thread  p. 139
	Thread tensions are too tight for the thread used	Check thread tensions  p. 45
	Thread-guiding parts, such as thread tube, thread guide or thread take-up disk, are sharp-edged	Check threading path  p. 19
	Throat plate, hook or spread have been damaged by the needle	Have parts reworked by qualified specialists  p. 127

Error	Possible causes	Remedial action
Skip stitches	Needle thread and hook thread have not been threaded correctly	Check threading path  p. 19
	Needle is blunt or bent	Replace the needle  p. 22
	Needle is not inserted correctly into the needle bar	Insert the needle correctly into the needle bar  p. 22
	The needle thickness used is unsuitable	Use recommended needle thickness  p. 139
	The reel stand is assembled incorrectly	Check the assembly of the reel stand  p. 101
	Thread tensions are too tight	Check thread tensions  p. 45
	Throat plate, hook or spread have been damaged by the needle	Have parts reworked by qualified specialists  p. 127
Loose stitches	Thread tensions are not adjusted to the sewing material, the sewing material thickness or the thread used	Check thread tensions  p. 45
	Needle thread and hook thread have not been threaded correctly	Check threading path  p. 19
Needle breakage	Needle thickness is unsuitable for the sewing material or the thread	Use recommended needle thickness  p. 139

11 Technical data

Noise emission

Workplace-specific emission value as per DIN EN ISO 10821:

$L_{pA} = 78 \text{ dB (A)}$; $K_{pA} = 1.38 \text{ dB (A)}$ at

- Stitch length: 6.0 mm
- Sewing foot stroke, alternating: 1.5 mm
- Speed: 1700 rpm
- Sewing material: 4fold fabric; G1 DIN 23328

Noise emission

Workplace-specific emission value as per DIN EN ISO 10821:

$L_{pA} = 76 \text{ dB (A)}$; $K_{pA} = 0.94 \text{ dB (A)}$ at

- Stitch length: 6.0 mm
- Sewing foot stroke, alternating: 7.2 mm
- Speed: 1100 rpm
- Sewing material: 2-layer Skai; 1.6 mm 900 gr/mm²; DIN 53352

11.1 Data and characteristic values

Technical data	Subclass	
	860-190322	860-290322
Machine type	Special sewing machine	
Type of stitches	Double lockstitch 301	
Vertical hook with size	L	
Number of needles	1	2
Needle system	134-35	
Needle strength [Nm]	110-130	
Thread strength [Nm]	80/3-10/3	
Stitch length [mm]	1/12	
Maximum speed [min ⁻¹]	2500	
Speed on delivery [min ⁻¹]	2500	
Stroke height [mm] (only with reversing mechanism)	20	
Maximum sewing foot stroke	9	
Operating pressure [bar]	6	
Length [mm]	690	
Width [mm]	220	
Height [mm]	480	
Weight with direct drive [kg]	68	70
Rated voltage [V, Hz]	Depends on the drive package	

11.2 Requirements for fault-free operation

Compressed air quality must conform to ISO 8573-1: 2010 [7:4:4].

Fig. 89: Tabletop drawing


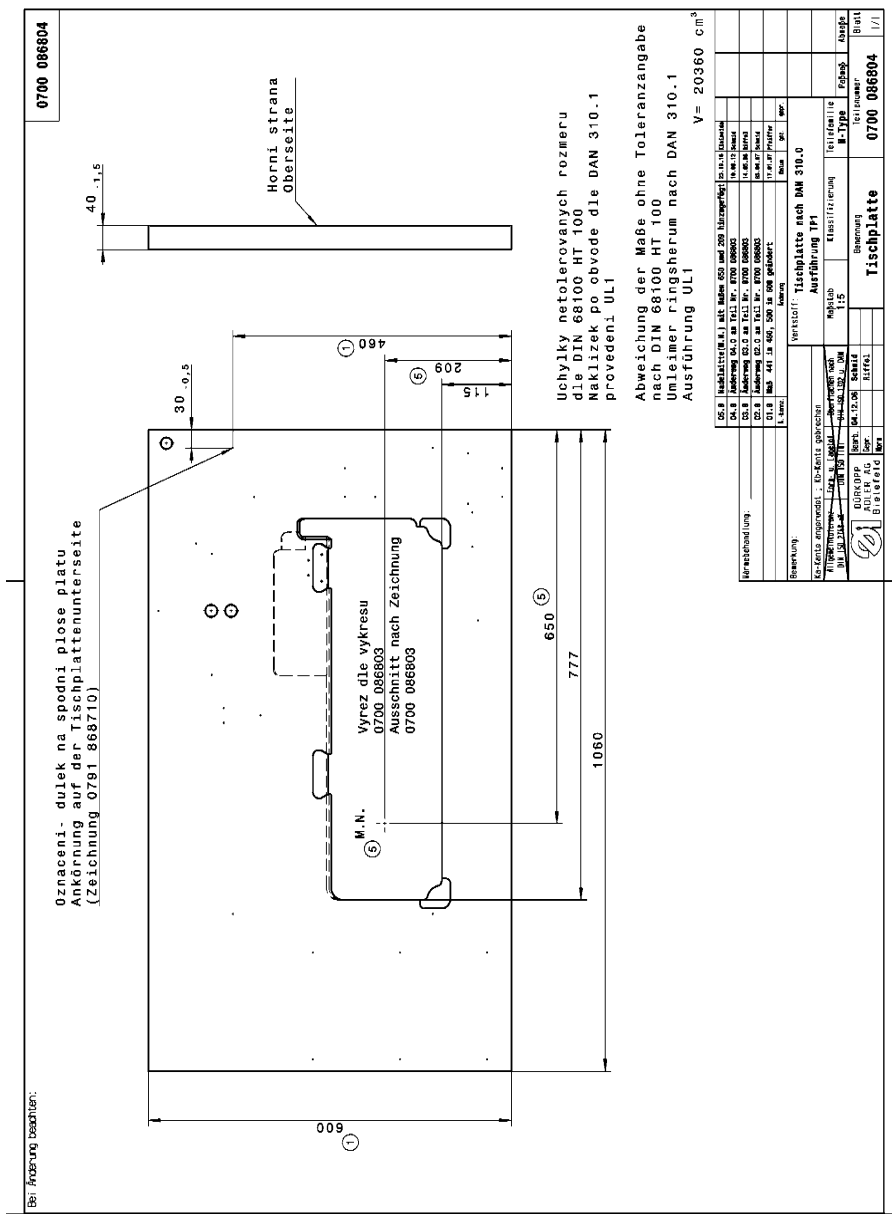


Fig. 90: Tabletop cutout



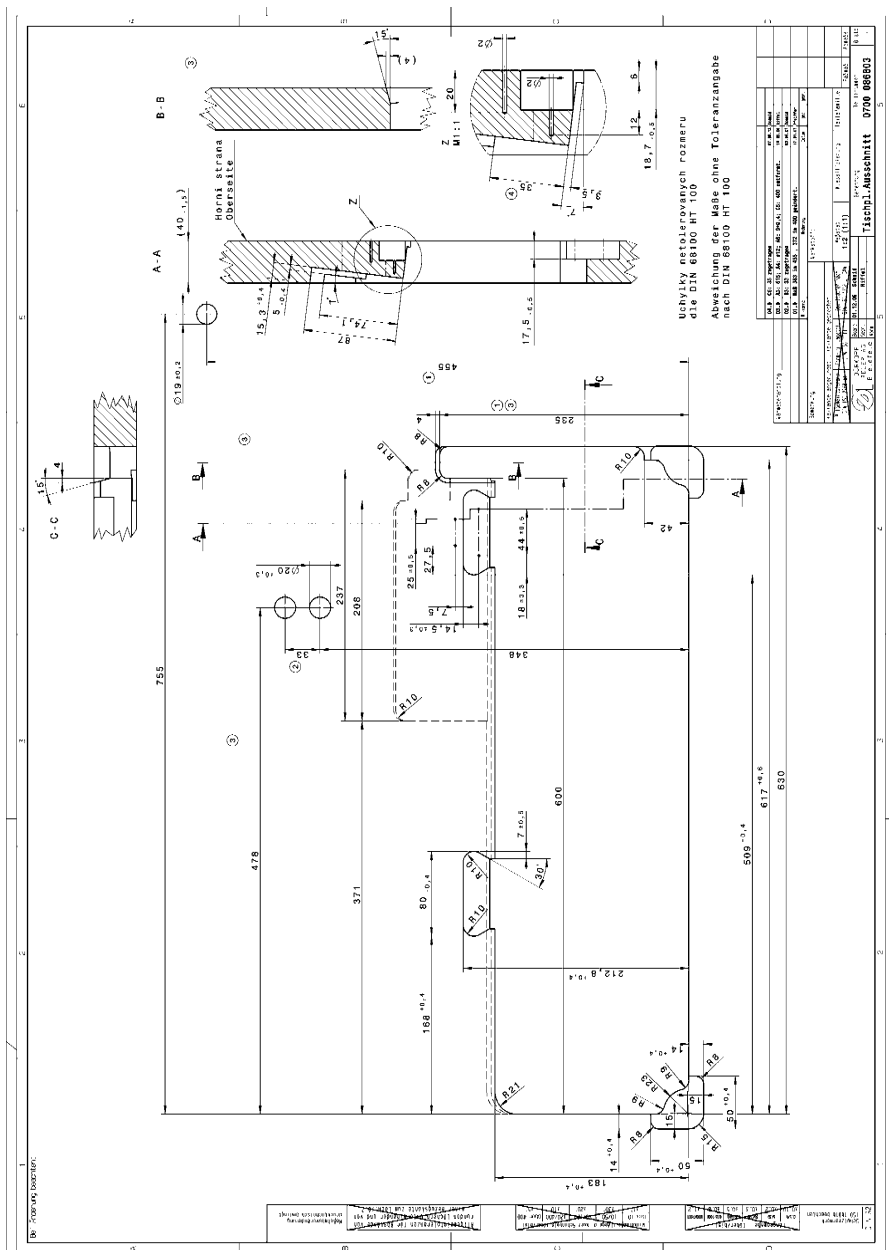

DÜRKOPP ADLER GmbH
Potsdamer Str. 190
33719 Bielefeld
Germany
Phone: +49 (0) 521 925 00
Email: service@duerkopp-adler.com
www.duerkopp-adler.com