



867 PREMIUM – činjenice i USP

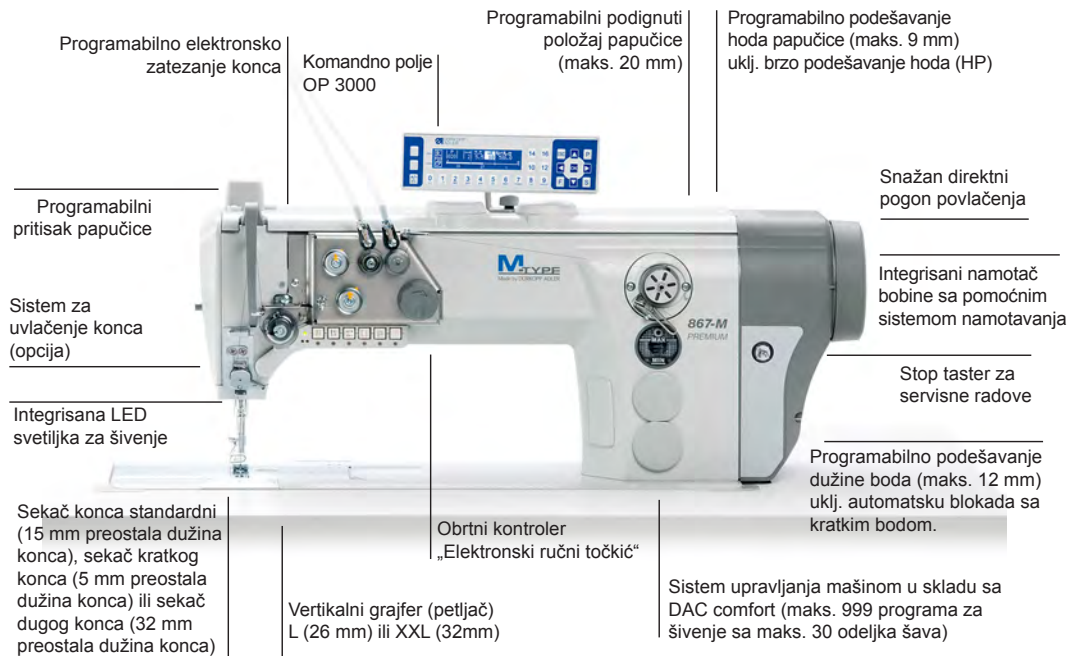

Šema uvlačenja konca

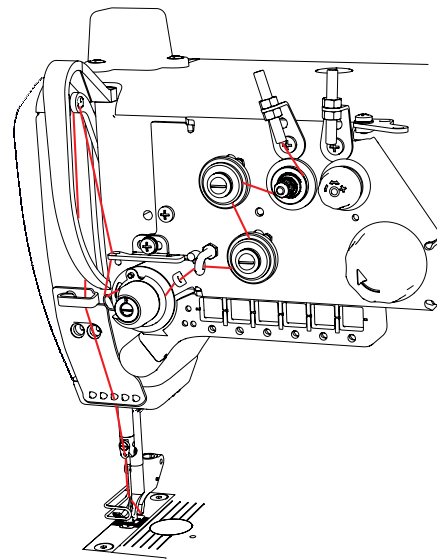

**DÜRKOPP
ADLER**

 
M-TYPE PREMIUM

Osnovne informacije



Dodela tasteru za omiljenu funkciju


1. Pritisnuti  taster



- (1) Režim uvlačenja konca
- (2) Pozicija papučice
- (3) Pozicija igle (gore/dole)
- (4) Izrada novog program za šivenje
- (5) Namotač
- (6) Resetovanje broja bobina
- (7) Ostale funkcije

2. Istovremeno pritisnete funkciju i taster za omiljeni program.

→ Izvršena je dodela funkcije tasteru za omiljeni program, funkcija se prikazuje na glavnom programu.

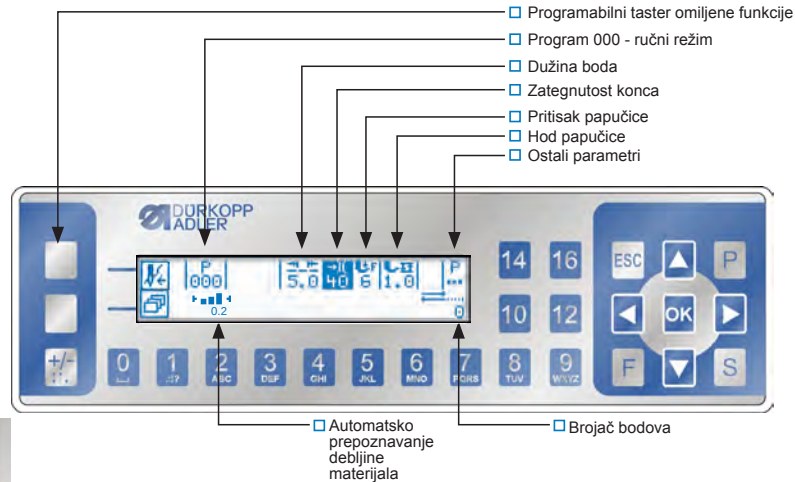

Režim programiranja

1. Izabrati režim za programiranje



2. Pritisnuti  taster



3. Pritisnuti  taster



Izmena broja programa uz pomoć numeričkih tastera

4. Pritisnuti  taster



RUČNO PROGRAMIRANJE (režim za podešavanje)

1. Tasterom  izabrati odeljak šava .
2. Pritisnite  taster kako bi dodali novi odeljak šava.



3. Uneti parametar za izabrani odeljak šava.
4. Pritisnuti  taster kako bi aktivirali sledeći odeljak šava.
Pritisnite  taster kako bi dodali novi odeljak šava.
5. Uneti vrednosti za izabrani odeljak šava.
→ Obaviti za sve željene odeljke šava.
6. Pritisnuti  → Program je sačuvan.

TEACH-IN

1. Pritisnuti  taster.



2. Podešavanje parametara.
3.  Izabrati i šiti za sledeći odeljak šava.
4. Pritisnuti  taster kako bi aktivirali sledeći odeljak šava, po potrebi ponovo podesiti parametre i šiti za sledeći odeljak šava.
→ Obaviti za sve željene odeljke šava.
5. Pedalu pritisnuti unazad → Program je sačuvan i prikaz na displeju sa vraća u režim za podešavanje.



→ Moguće su fini položaji

→ Pritisnuti  → Program je sačuvan.

Brisanje programa

1. Izabrati program za brisanje
2. Pritisnuti  taster.



3. Pritisnuti  taster.



4. Pritisnuti  taster.
→ Program je obrisao.
5. Pritisnuti  → Aktiviran je izbor programa.