Efka DC1550-DA321G Programm 5321

Parameterblatt - Parameter List - Liste des Parametres - Lista dei Parametri

Lista de Parametros - Lista dos Parâmetros

DC1550-Motor am Oberteil mit Übersetzung 1:1,5; 1-Nadel Maschinen

Parame	ter	Eir	nstellber	eich	Preset	867- 392342 LG	867- 393342 VF								
Vi. Latistica															
					10000		394342 AE=LG+VF								
	Doneniung and an anti-angle anti-angle anti-angle anti-angle anti-angle anti-angle anti-angle anti-angle anti-	_	min	max	1000R			ليتسبب ستختص				1	L		
deutsch	* T = Technikerebene, A = Ausrüsterebene, B= Bedienerebene Modus Maschinenklasse	e i	1	100	all all all	(=) 70	der Prese	twert bleibt	73	74	75	76	77	78	79
F-290		<u>-</u>	1	100		7V		12	73	/4	/3	10		10	19
	Nachfolgende Parameterwerte sind mit F-290 eingestellt:		101	0000	4000	2000	2000				<u> </u>	<u> </u>			
in the second	obere Grenze der Maximaldrehzahl Drehzahl Hubverstellung = Drehzahlbegrenzung (DB2000)		<u>-121)</u> 400	6000 6000	1000 2000	3000 1800	3000 1800					<u> </u>			
	Riegelsynchronisationszeit für Endriegel		400	500	2000	1800 ==	=						<u> </u>	······	
	Riegelsynchronisationsdrehzahl für Endriegel		200	3000	40 500	=	= =		<u> </u>		<u> </u>	<u> </u>			
	Schneidstich rückwärts/vorwärts		200	0000	000	2	- 2				<u> </u>		ļ		
	Haltekraft im Maschinenstillstand	'	0	50	0	25	25				<u> </u>	┼────			
	Referenzpunkt (EP = Eintauchpunkt Nadel in Stichplatte)	(7	0	50 0	*EP	25 *EP	*EP					<u> </u>			
	Nadelposition 1 = einlaufende Flanke (Pos.1)	r -	0	359	42	16	16				<u> </u>				
	Nadelposition 1a = auslaufende Flanke	т	0	359	140	·=	=				<u> </u>				· ·
	Nadelposition 2 = einlaufende Flanke (Pos.2)	τ –	0	359	326	=	=				<u> </u>				
	Nadelposition 2a = auslaufende Flanke	T	0	359	357	=	=				<u>├─── , </u>				·
-	Anzahl der Rückdrehschritte	r	0	359	63	45	45								
14	Rückdrehen ON / OFF	r –	0	1	0	1	1				1	1			
	1=HP mit Drehzahl F-117, 0=HP mit Drehzal F-117 für 500mS	r –	0	1	1	0	0		·		<u> </u>	<u> </u>			
and the second se	Einschaltwinkel des Fadenabschneiders	r I	0	359	56	240	240				<u> </u>	1			
F-191	Ausschaltverz. der Fadenspannungslüftung	r 🗌	0	990	50	=	=				1				
F-192	Einschaltverz.der Fadenspannungslüftung	r	0	359	182	231	231								· · ·
	Stoppzeit für Fadenabschneider	r 👘	0	500	30	0	0				1	<u> </u>			
F-196	Funktion der beiden Fadenspannungen bei Nähfußlüftung	г	0	3	0	2	2					<u> </u>			
	Funktion der 2. Fadenspannung mit HP und Speedomat	г	0	3	0		=					<u>+</u>			
F-241	Eingangsfunktion A/11 für Eingang 2	A	0	88	9	8	8				1	1			
F-242	Eingangsfunktion A/6 für Eingang 3	A	0	88	2	1	1						1		
F-267	Kantenschneider Kopplung mit Nähfuss	4	0	2	0	= .	2					1	<u> </u>		
F-270	Auswahl Positionssensor	٩	0	6	0	6	6							······	
F-272	Übersetzung der Motorwelle zur Maschine	4	150	9999	1000	00642	00642					1			
F-275	Funktionsmodule "C"; Ausgang A/15, Eingang A/9, LED A/22	4	0	17	17	=	9					1			
F-276	Ausgang C (A/15) und LED C (A/22) nach FA	A	0	1	0	=	1					1			
F-550	Auswahl der Eingangs-Funktion an Buchse B22/3 f Input 11	4	0	83	13		=			······	[1			
F-551	Auswahl der Eingangs-Funktion an Buchse B22/3 f Input 12	٩	0	83	14	=	=		·			1			

Freigabe Nr.: 0157/08

Änd. Stand: 00.0

Datum: 08.12.2008

Name: Pm

Parameterblatt 9800 331104 PB55 Seite-Page-Página 1 / 2 Efka DC1550-DA321G Programm 5321

Parameterblatt - Parameter List - Liste des Parametres - Lista dei Parametri

DA321G_5321.xls / PB55

Lista de Parametros - Lista dos Parâmetros

DC1550-motor at sewing head with gear ratio 1:1,5; 1-needle machines

Parameter		Γh	imits		Preset	867-	867-			star g d. i				.	
ANDRO						392342	Contraction and the second se second second sec								
						LG	VF							linger først i l	
kutingen Grit							394342								
No.	Designation	*	min	max	1000R		AE=LG+VF								
english	* T = Technician level, A = Supplier lev	/el	ani a bib			(=)	same as p	oreset						· · · · · · · · · · · ·	· ·
F-290	Mode "machine class"	A	1	100	0	70	71	72	73	74	75	76	77	78	79
	Following parameters are adjusted with parameter F-290:	Π													
F-111	Upper limit of maximum speed	Π	(P-121)	6000	1000	3000	3000				1				
F-117	High lift walking speed = speed limitation DB2000	T	400	6000	2000	1800	1800				[1		
F-123	Backtack synchronization time for end backtack	T	0	500	40	=	₩.								
F-124	Backtack synchronization speed for end backtack	T	200	3000	500	<u></u>	=						· ·		
F-136	Trimming stitch backward	T	0	4	0	2	2					1			
F-153	Braking power at machine standstill	TT	0	50	. 6	25	25								
F-170	Setting the reference position (EP = needle goes into needle plate)	T	0	0	*EP	*EP	*EP			ĺ			1		
F-171	Needle position 1 = needle behind the bottom dead center	T	0	359	42	16	16					1	1		
	Needle position 1A = internal switching point	TT	0	359	140	=	=				[·····	1			
	Needle position 2 = thread lever before the upper dead center	T	0	359	326	=	=			1					
	Needle position 2A = internal switching point	TT	0	359	357	. =							1	·	
F-180	Number of reversion increments	Т	0	359	63	45	45						1		
F-182	Reversion ON / OFF	TT	0	1	0	1	1			1					
F-189	1= HP with speed limitation par. 117, 0= HP with speed limitation par. 117	T	0	1	. 1	0	0		· ·				·		
F-190	Activation angle of thread trimmer	T	0	359	56	240	240								
F-191	Switch-off delay of thread tension release	TT	0	990	50	=	=					1			
F-192	Activation angle of thread tension release	T	0	359	182	231	231				· ·				
F-193	Stop time for thread trimmer	T	0	500	30	0	0		İ		1				
F-196	Functions of both thread tension release with presser foot lifting	TT	0	3	0	2	2							· · · · ·	
F-197	Functions of 2. thread tension with HP and Speedomat	T	0	3	0	=	=		1			<u> </u>			
F-241	Input A11/ Input 2 (pushbutton for blocking machine)	A	0	88	9	8	8						1		
F-242	Input A6/ Input 3 (needle up/down)	A	0	88	2	1	1				1	1	[
F-267	0	A	0	2	0	.=	2	······	1					[]	
F-270	Selection according to the position sensors	A	0	6	0	. 6	6	~		 					
F-272	Transmission ratio between motor shaft to machine shaft	A	150	9999	1000	00642	00642	·					†		
F-275	Function modules "C"; Output A/15; Input A/9, LED A/22	A	0	17	17	· _	9						· ·		
F-276	Output "C" (A/15) and LED "C" (A22) after thread trimming	A	0	1	0	=	1		[İ.	[
	Input Buchse B22 PIN 3, Input 11 (HP operation mode not stored)	A	0	. 83	13	=	=	·····				1			
	Input Buchse B22 PIN 4, Input 12 (HP operation mode stored)	A	0	83	14	=			[1			
	Freigabe Nr.: 0157/08	<u> </u>				·····	h	····	Ł	*	d		L		

Freigabe Nr.: 0157/08

Änd. Stand: 00.0 Datum: 08.12.2008

Name: Pm

7. Dez. 2008 Parameterblatt 9800 331104 PB55 Seite-Page-Página 2 / 2