



DongleCopy

Operating instructions

All rights reserved.

Property of Dürkopp Adler AG and protected by copyright. Any reuse of these contents, including extracts, is prohibited without the prior written approval of Dürkopp Adler AG.

Copyright © Dürkopp Adler AG 2013

1	General information.....	4
1.1	Requirements	4
1.2	DongleCopy options	5
1.2.1	Machine program update for DAC II (only using Winloader software).....	5
1.2.2	Machine program update for DAC III.....	5
1.2.3	Machine program update for DAC Eco / Basic / Classic.....	5
1.3	MemoDongle	6
1.4	Loader cable	6
1.5	DongleConnector.....	6
2	Installing DongleCopy	7
2.1	Internet download of “DongleCopy.exe”	7
2.2	Installation of “DongleCopy” PC software	7
2.3	Installation of DongleConnector	8
3	Operating instructions for DongleCopy	10
3.1	Functions of DongleCopy	10
3.2	Internet download machine program.....	11
3.3	Machine-class-dependent seam program data.....	11
3.4	PC -> Dongle (write to MemoDongle)	12
3.5	Dongle -> PC (read out MemoDongle).....	14
3.6	PC -> DAC-Control (Load machine program into the DAC control system)	14
3.7	Read file info (Display .DNG file “header” information)	17
3.8	Read dongle info (Display dongle “header” information).....	18
3.9	Read DAC-Control info (Display DAC control system “header” information).....	18
3.10	Possible DongleCopy faults.....	20
4	Connection options for DAC II / III / Eco / Basic / Classic.....	21
4.1	DAC II loader cable connection	21
4.2	DAC III loader cable / DongleConnector port	21
4.3	DAC III MemoDongle port	21
4.4	DAC Eco dongle port.....	22
4.5	DAC Basic / Classic dongle port.....	22

1 General information

All machines equipped with a control system in the DAC family are in a position to update machine software using a loader cable / DongleConnector or MemoDongle.

The DongleCopy PC software is a user-friendly program which can be used to read out or write on machine software and data (free contours) from the memo dongle storage media.

Furthermore, the DACIII can be written directly using a loader cable / DongleConnector.

1.1 Requirements

Your system needs to meet the following minimum requirements to be able to work with the DongleCopy PC software:

- Pentium 200 MHz or higher
- Windows XP or later, 32- or 64-bit Windows system
- One free serial COM port or the USB DongleConnector

1.2 DongleCopy options

1.2.1 Machine program update for DAC II (only using Winloader software)

PC	Software
Serial (RS 232)	→ ...EXE → <u>Loader cable</u> 9850 001043 → DAC control system
USB	→ ...EXE → <u>Adapter*</u> USB – RS232 → <u>Loader cable</u> 9850 001043 → DAC control system

Adapter * = USB – RS232 Standard adapter for computers; available in a computer store
Please note!!
This adapter comes with a Windows driver and has to be installed accordingly.
The COM-port position assignment in conjunction with the Dürkopp Adler "Winloader" software must be < 5.



Important note!!

DAC II control systems can only be installed via the Dürkopp Adler "Winloader" software contained in ...EXE.
Installation is not possible using the DongleConnector and DongleCopy.

1.2.2 Machine program update for DAC III

PC	Software
Serial (RS 232)	→ ...DNG → <u>MemoDongle</u> 9835 901005
Serial (RS 232)	→ ...DNG → <u>Loader cable</u> 9850 001043 → DAC control system
USB	→ ...DNG → <u>Adapter**</u> USB – RS232 → <u>Loader cable</u> 9850 001043 → DAC control system
USB	→ ...DNG → <u>DongleConnector</u> 9850 001211 → <u>MemoDongle</u> 9835 901005
USB	→ ...DNG → <u>DongleConnector</u> 9850 001211 → DAC control system

Adapter ** = USB – RS232 Standard adapter for computers; available in a computer store
Please note!!
This adapter comes with a Windows driver and has to be installed accordingly.
The COM-port position assignment in conjunction with the Dürkopp Adler "DongleCopy" software must be < 10.

1.2.3 Machine program update for DAC Eco / Basic / Classic

PC	Software
Serial (RS 232)	→ ...DNG → <u>MemoDongle</u> 9835 901005
USB	→ ...DNG → <u>DongleConnector</u> 9850 001211 → <u>MemoDongle</u> 9835 901005

1.3 MemoDongle

The MemoDongle is a serial 1MB storage unit and contains a so-called Flash memory, which can retain information without using batteries. It is read out or written to via the serial RS232 port on the computer or via the DongleConnector.



Important note!!

The MemoDongle is not a storage unit that is freely available commercially. It can be obtained at **DÜRKOPP-ADLER AG** using the material number **9835 901005**.



Important note!!

The installation of drivers is not required for the MemoDongle. All COM ports on the computer are searched for automatically.

A DongleConnector (9850 001211) is required for PCs without a serial interface (see following chapter).

1.4 Loader cable


The loader cable (9850 001043) is a device that can be connected to a 9-pin serial RS 232 interface. It is used for directly transferring machine software to the control systems, such as DACII or DACIII.



9850 001043

1.5 DongleConnector

The DongleConnector (9850 001211) is a device that can be connected to a USB interface. On the hand, you have a 9-pin serial FPI interface (not an RS 232 interface!) which can be used for writing to the MemoDongle. Furthermore, you have yet another interface (RS 422) for writing directly to control systems such as the DACIII.

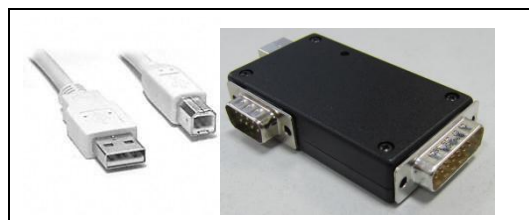

9850 001211



Important note!!

Drivers have to be installed for the DongleConnector. These are already available in the DongleCopy program. If you need to install the drivers manually, they can be found in the "Driver" subfolder in the DongleCopy program.

2 Installing DongleCopy

2.1 Internet download of “DongleCopy.exe”

The required files must be available beforehand in a folder on the computer.

- Select our homepage at <https://software.duerkopp-adler.com/pc-programms.html>
- Click on the “DongleCopy” button



- Select the setup file for downloading
- Click on the “Download” button
- Click on the “Einkauf abschließen” (Complete purchase) button



Important note!!

For the download, you need to register on our homepage at <https://software.duerkopp-adler.com>.

Registration and downloading the software are free of charge.

2.2 Installation of “DongleCopy” PC software


- You can start the installation program by double clicking on the “SetupDACDongleCopy.exe” file.
- Choose one of the languages available.
- Confirm using the “Weiter” (Next) button to continue with the setup.
- In order to install the software, you need to accept the terms of the license agreement.
- Confirm the installation directory using the “Weiter” (Next) button.
 - In case a different installation directory name is required (e.g. if a new version is to be installed), then click on “Durchsuchen” (Search) and enter the new directory name.
 - If the storage location is to be changed (not recommended), then search for the required target folder from the folder list, or create a new folder at the required location.
 - Confirm your entry by using the “OK” button.
 - If the directory name does not exist, a query is made as to whether a name should be created. Confirm with “JA” (YES).
- Confirm the program directory using the “Weiter” (Next) button.
 - If there are several versions of DongleCopy, it is recommended that a different name for the program directory be given for each version, e.g. “DongleCopy 3.3”.
- Should you want to create a desktop symbol, please select the “Desktop-Symbol erstellen” (Create desktop symbol) box and confirm using the “Weiter” (Next) button.
- The installation is executed by confirming the installation configuration using the “Installieren” (Install) button.
- The installation takes about one minute. Confirm the software installation using the “Fertigstellen” (Finish) button.

2.3 Installation of DongleConnector

- The “DongleCopy” software (version 3.46 or later) must be installed on your computer for the installation of DongleConnector (see previous chapter).
- Connect the DongleConnector USB cable with a USB interface on your PC.
- You can allow the Windows operating system to perform an automatic search for the driver on your computer. This process can take several minutes.
- As an alternative, you can specify the path for the driver directly.
 - Select “Nein, diesmal nicht” (No, not this time) for the search on the Windows update website and confirm using the “Next” button.



- For direct path specification, select “Install from a list or specific location” and confirm this using the “Next” button (recommended); for automatic installation, select “Install the software automatically”.

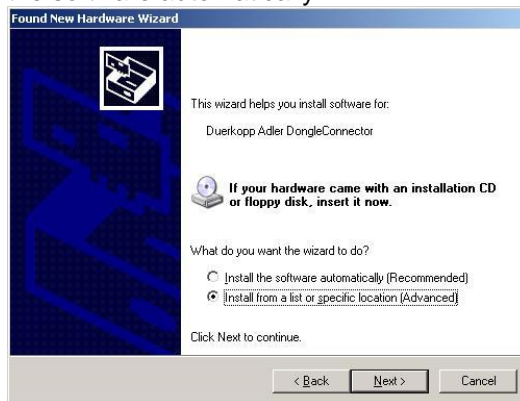

- Select “Include this location in the search” and specify the path where you installed the DongleCopy program.
For example: C:\DA\DACDongleCopy\driver



- Confirm using the “Next” button.

- Press the “Continue Anyway” (Continue installation) button.




- To complete the installation, press the “Finish” button.




- After installing the driver successfully, you can now use the DongleConnector with the DongleCopy software.

You can use Device-Manager to check whether the DongleConnector was correctly detected and whether the COM port meets the requirements for use with DongleCopy. (COM port < 10).

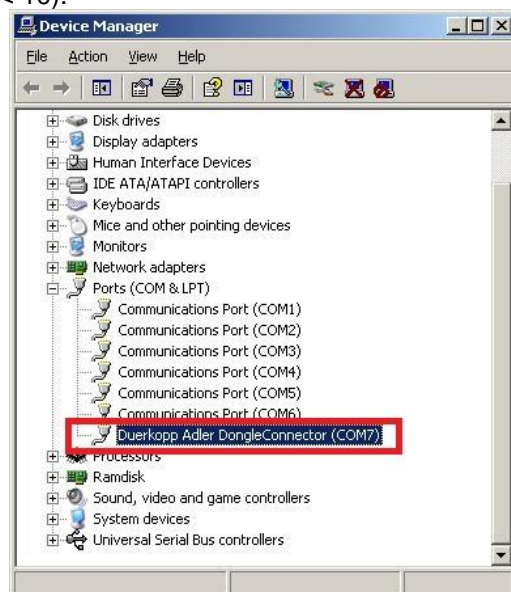

3 Operating instructions for DongleCopy

3.1 Functions of DongleCopy

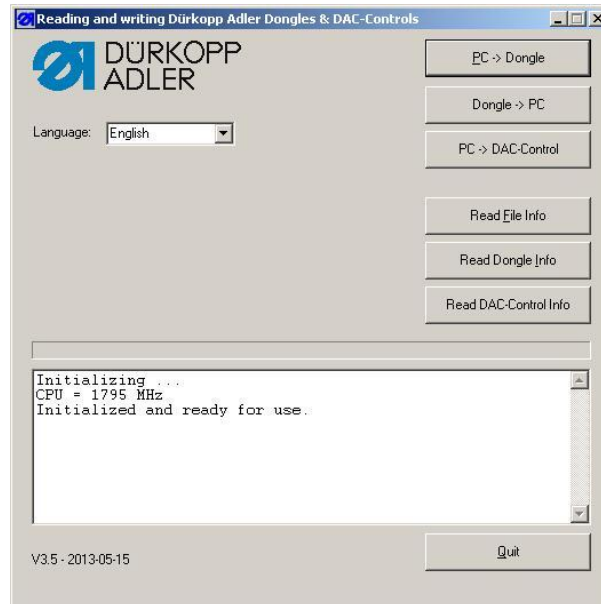

- **PC -> Dongle** For saving operating programs and data on a MemoDongle
- **Dongle -> PC** For loading operating programs and data from the machine control system (depending on DAC control system)
- **PC -> DAC-Control** For loading operating programs into the DAC control system using the loader cable/DongleConnector
- **Read File info** For reading out the "header" information of a .DNG file saved on the PC
- **Read Dongle info** For reading out the "header" information from the MemoDongle
- **Read DAC-Control Info** For reading out the "header" information of the operating program in the control system
- **Language** Selection of language: German / English

3.2 Internet download machine program

- Select our homepage at <https://software.duerkopp-adler.com>
- Select the desired language using appropriate country flag
- Click on the “**Maschinenprogramm**” (Machine program) category.
- Select the required machine class using the product filter.
- Click on the file for the required machine program (dongle), e.g. 510_000_A043_140803.DNG
- The “**Dateidownload**” (**File download**) menu appears.

Structure of the file name

510_000_A043_140803.DNG

File extension
 Creation date
 Software version, e.g. A 4.3
 Subclass
 Machine class



Important note!!

Only files with the .DNG extension can be read by the DongleCopy software.

- Click on the “**Download**” button
- Click on the “**Einkauf abschließen**” (**Complete purchase**) button
- Now you need to register to complete the purchase



Important note!!

For the download, you need to register on our homepage at <https://software.duerkopp-adler.com>

Registration and downloading the software are free of charge.

3.3 Machine-class-dependent seam program data

Depending on the machine class, data backups or free contours can be created and saved by the seam programs.

- Creation of seam programs using DA PC software
- Creation of seam programs in the machine
- Backup of machine-class-dependent seam program data (programs / sequences)

e.g. **510_ Riegel_Spezial_3.DNG**

The .DNG files can, for example, be sent by e-mail and loaded back into the respective machine class using MemoDongle / DongleConnector.



Important note!!

A MemoDongle can only save one .DNG file.

Any previous content is deleted when data is saved on the MemoDongle.


3.4 PC -> Dongle (write to MemoDongle)

The required files must be available beforehand in a folder on the computer.

- Start “DongleCopy” PC software.
- Click on the “PC -> Dongle” button.



- Select the required .DNG file and then click on the “Open” button.

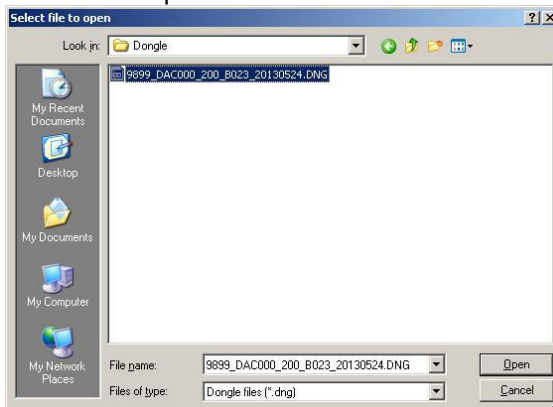


- Insert MemoDongle into the serial RS 232 interface for the PC or into the DongleConnector and confirm using the “OK” button.



The program now searches through the serial interfaces of the PC.

- If data is located on the MemoDongle, then its “header” information will be displayed. Click on the “OK” button to confirm.

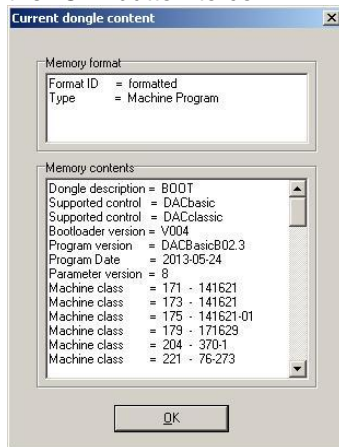

- If the data on the MemoDongle is able to be overwritten, confirm using the “Yes” button. If the data is not to be overwritten, the process can be cancelled by pressing the “No” button.



- If the MemoDongle was programmed successfully, then the message “Dongle is ready” appears. Confirm using the “OK” button.



Programming the MemoDongle takes up to 20 minutes, depending on the size of the program.



Please note!!

If the message “Do NOT use this dongle to boot a machine” appears, then the dongle must not be used for booting up the machine.



- To close the “DongleCopy” program, click on the “Quit” button.
- Remove the MemoDongle from the serial RS 232 interface of the PC or from the DongleConnector.

3.5 Dongle -> PC (read out MemoDongle)

All information saved on the MemoDongle, whether machine software or data, can be saved on the PC.

- Click on the **“Dongle -> PC”** button.
- Choose the target folder in which the file is to be saved, enter the required file name, and click on **“Save”**.
- Insert the MemoDongle into an RS 232 interface on the PC or into the DongleConnector. Click on the **“OK”** button to confirm.
- The machine searches through all COM ports for a MemoDongle.
- If a MemoDongle is found, then all information saved on the MemoDongle is saved as a file on the PC.


3.6 PC -> DAC-Control (Load machine program into the DAC control system)




A different procedure is required depending on the machine class and the type of control panel.

Please refer to the installation and operating instructions for the relevant machine class for the correct procedure.


- Start **“DongleCopy”** PC software.
- Click on the **“PC -> DAC-Control”** button.

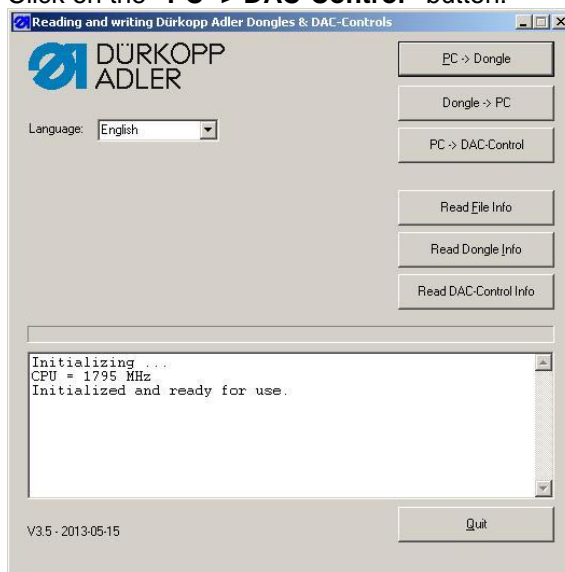

- Select the required .DNG file and then click on the **“Open”** button

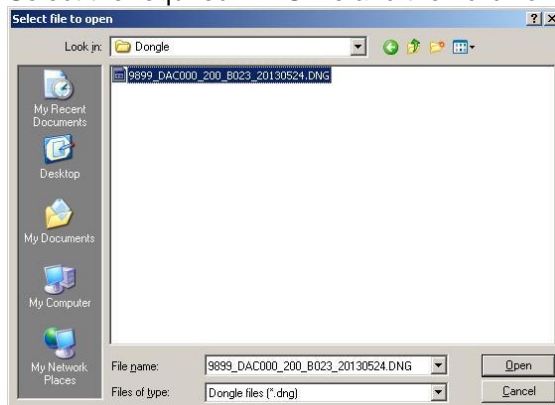

- First the “header” information will be displayed. Click on the “OK” button to confirm.

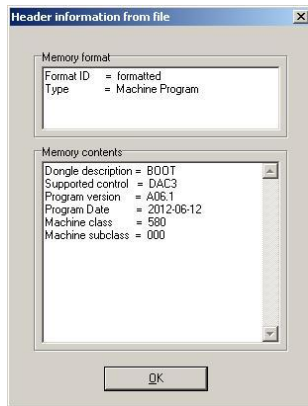

- Connect the DongleConnector / loader cable with the 15-pin Sub-D on the DACIII (port X170) and confirm using the “OK” button.




The program now searches through the serial interfaces of the PC.


- When the serial interfaces are being searched through, you will be prompted to switch the DAC control system off and back on again. After this has been performed, click on the “OK” button to confirm.



- If data is located on the control system, then its “header” information will be displayed. Click on the “OK” button to confirm.

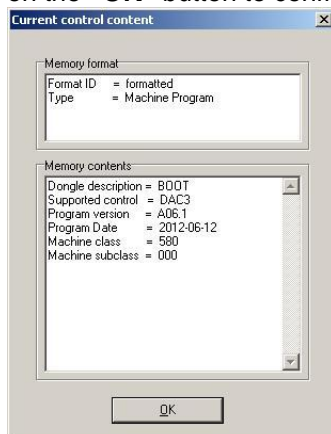

- If the data on the control system is able to be overwritten, confirm using the “Yes” button. If the data is not to be overwritten, the process can be cancelled by pressing the “No”

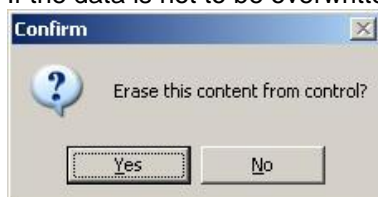

- If the control system was programmed successfully, then the message “Control is ready” will appear.
Confirm using the “**OK**” button.



Programming the control system takes up to 20 minutes, depending on the size of the program.

- Switch the control system off to remove the DongleConnector.
- To close the “DongleCopy” program, click on the “**Ende**” (**End**) button.

3.7 Read file info (Display .DNG file “header” information)

All files in the machine software or a data file in a free contour are given a header.

The “**Lese Datei Info**” (**Read file info**) function allows information to be received about the data content of a file on the computer with the ending .DNG.

- Start “**DongleCopy**” PC software.
- Click on “**Read File info**”
- Find the folder in which the required file is located.
Double click on the file to be opened or click on “**Open**”.



Please note!!

Only files with the ending .DNG will be displayed.
In free contours, the ending of the file can vary and will possibly not be shown.
“Alle” (All) must then be selected under “Files of type”.

- The “header” information of the selected file will be shown.

Memory formatting

- Format ID** = Indicates whether a file has a formatted header
- Type** = Indicates whether the file contains a software program or data, e.g. free contours

Memory content

- Dongle description** = Indicates whether the file is for installing software (boot) or whether a file contains data (memo)
- Machine class** = Assignment to machine class
- Machine subclass** = Assignment to machine subclass
- Version** = Display of software version (only for booting)
- Date** = Creation date of file

- Click on “**OK**” to access the main menu again

3.8 Read dongle info (Display dongle “header” information)

All files in the machine software or a data file in a free contour are given a header.

The “**Read Dongle info**” (**Read dongle info**) function allows information to be received about the content of a file on the MemoDongle with the ending .DNG.

- Start “**DongleCopy**” PC software.
- Click on the “**Lese Dongle Info**” (**Read dongle info**) button.
- The header information of the MemoDongle will be shown.

Memory formatting

Format ID = Indicates whether a file has a formatted header

Type = Indicates whether the file contains a software program or data, e.g. free contours

Memory content

Dongle description = Indicates whether the file is for installing software (boot) or whether a file contains data (memo)

Machine class = Assignment to machine class

Machine subclass = Assignment to machine subclass

Version = Display of software version (only for booting)

Date = Creation date of file

- Click on “**OK**” to access the main menu again

3.9 Read DAC-Control info (Display DAC control system “header” information)

All files for the machine software are given a header.

The “**Read DAC-Control Info**” allows information to be received about the data content of a machine program installed in the DAC control system.


- Start “**DongleCopy**” PC software.
- Click on the “**Read DAC-Control Info**” button
- Connect the DongleConnector / loader cable with the 15-pin Sub-D on the DACIII (port X170) and confirm with the “**OK**” button



- The program now searches through the serial interfaces of the PC.
- When the serial interfaces are being searched through, you will be prompted to switch the DAC control system off and back on again. After this has been performed, click on the “**OK**” button to confirm.



- If data is located on the control system, then its “header” information will be displayed. Click on the “OK” button to confirm.

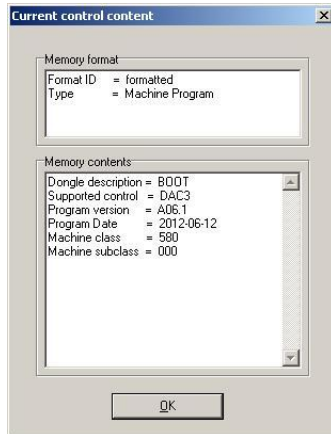

- The header information of the selected file will be shown.

Memory formatting

Format ID = Indicates whether a file has a formatted header

Type = Indicates whether the file contains a software program or data, e.g. free contours.

Memory content

Dongle description = Indicates whether the file is for installing software (boot) or whether a file contains data (memo)

Machine class = Assignment to machine class

Machine subclass = Assignment to machine subclass

Version = Display of software version (only for booting)

Date = Creation date of file

- Click on “OK” to access the main menu again


3.10 Possible DongleCopy faults

Fault messages	Description	Troubleshooting
The binary file cannot be read!	= The binary file cannot be read.	– The .DNG file must not be write-protected. - When using Windows XP, the directory must be located in C:\ ; it must not be located under “My documents”.
The binary file cannot be opened!	= The binary file cannot be read.	– The .DNG file must not be write-protected. - When using Windows XP, the directory must be located in C:\ ; it must not be located under “My documents”.
The binary file cannot be written!	= The binary file cannot be written.	– The .DNG file must not be write-protected. - When using Windows XP, the directory must be located in C:\ ; it must not be located under “My documents”.
The dongle cannot be read!	= Interruption of MemoDongle read operation	– Check whether the dongle is securely fitted to the RS 232 interface / DongleConnector
MemoDongle is not OK!	= Memory content of the MemoDongle does not match the memory content of the source file	– Prepare the MemoDongle again
MemoDongle empty test is not OK!	= Data can still be found on the MemoDongle	– Prepare the MemoDongle again
MemoDongle not found!	= No MemoDongle found	– Check whether the dongle is securely fitted to the RS 232 interface / DongleConnector – Use a different interface
MemoDongle programming is not OK!	= Error when copying the program has occurred	– Prepare the MemoDongle again - possible MemoDongle defect
Timeout when erasing the MemoDongle!	= Fault occurred when erasing the dongle	– Prepare the MemoDongle again - possible MemoDongle defect

Information	Description	Troubleshooting
Do not use MemoDongle to boot the machine!	= Data on the MemoDongle corrupt, the dongle must not be used for booting the machine.	Prepare the dongle again – Deactivate the screensaver if necessary – Do not use any memory-consuming applications during the write process – Deactivate the virus scanner

4 Connection options for DAC II / III / Eco / Basic / Classic

4.1 DAC II loader cable connection

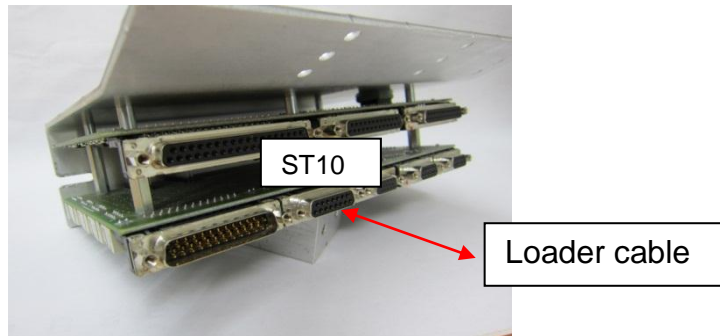

- Remove the display cable from ST10 and connect the loader cable to ST10 accordingly.




Important note!!


DAC II control systems can only be installed via the Winloader software contained inEXE.

Installation is not possible using the DongleConnector and DongleCopy.

4.2 DAC III loader cable / DongleConnector port

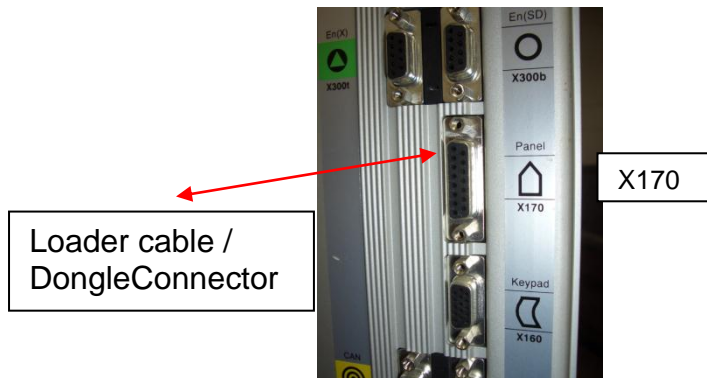

4.3 DAC III MemoDongle port

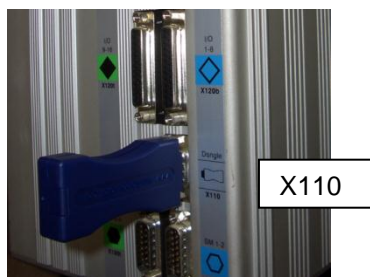

4.4 DAC Eco dongle port



4.5 DAC Basic / Classic dongle port



Notes:

Notes:



DÜRKOPP ADLER AG
Potsdamer Str. 190
33719 Bielefeld
Germany
Phone +49 (0) 1805 383 756
Email: service@duerkopp-adler.com
www.duerkopp-adler.com