

Teile-Nr./ Part-No.: **0791 100627**


Handhabung der RAM-Karte 9805 791114 an der Kl. 806

Beim Taschenaufnäher KI.806 mit dem Bedienfeld 9850 001024 ergeben sich in Verbindung mit der neuen RAM- Karte 9805 791114 folgende Kriterien, die zu beachten sind:

 Die RAM- Karte darf nur eingesteckt werden, wenn die Nähanlage ausgeschaltet ist.

 Soll die RAM- Karte bei eingeschalteter N\u00e4hanlage eingesteckt werden, darf der Schreibschutz vorher nicht aktiviert werden (Aktivierung erfolgt erst, wenn die RAM- Karte gesteckt ist).

 Wurde der Schreibschutz der RAM- Karte außerhalb der Maschine aktiviert, darf die RAM- Karte nur bei ausgeschalteter Maschine eingesteckt werden.

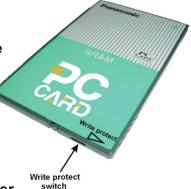

Ausgabe/Edition: 12. 2006

Änderungskennziffer: **00.0**

Printed in Federal Republic of Germany

Blatt: 1 Sheet: von 2 from



Teile-Nr./ Part-No.: **0791 100627**


Handhabung der RAM-Karte 9805 791114 an der Kl. 806

Beim Taschenaufnäher KI.806 mit dem Bedienfeld 9850 001024 ergeben sich in Verbindung mit der neuen RAM- Karte 9805 791114 folgende Kriterien, die zu beachten sind:

 Die RAM- Karte darf nur eingesteckt werden, wenn die Nähanlage ausgeschaltet ist.

 Soll die RAM- Karte bei eingeschalteter N\u00e4hanlage eingesteckt werden, darf der Schreibschutz vorher nicht aktiviert werden (Aktivierung erfolgt erst, wenn die RAM- Karte gesteckt ist).

 Wurde der Schreibschutz der RAM- Karte außerhalb der Maschine aktiviert, darf die RAM- Karte nur bei ausgeschalteter Maschine eingesteckt werden.

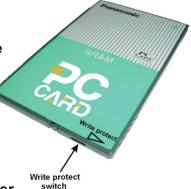

Ausgabe/Edition: 12. 2006

Änderungskennziffer: **00.0**

Printed in Federal Republic of Germany

Blatt: 1 Sheet: von 2 from




Teile-Nr./ Part-No.: 0791 100627

Handling the RAM card 9805 791114 with the Cl. 806

Please pay attention to the following criterion in connection with the use of the new RAM card 9805 791114 in the sewing unit class 806 equipped with the control panel 9850 001024:

- Insert the RAM card only when the sewing unit is switched off.
- Should you insert the RAM card with the sewing unit switched on, it should not be write protected (activate the write protection only when the RAM card is inserted).
- If the RAM card is write protected outside the sewing unit, it may only be inserted with the sewing unit switched off.

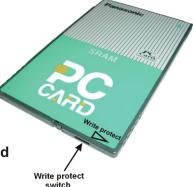

Ausgabe/Edition: 12.2006

Änderungskennziffer: 00.0

Printed in Federal Republic of Germany

Blatt: 2

von 2

Sheet:

from




Teile-Nr./ Part-No.: 0791 100627

Handling the RAM card 9805 791114 with the Cl. 806

Please pay attention to the following criterion in connection with the use of the new RAM card 9805 791114 in the sewing unit class 806 equipped with the control panel 9850 001024:

- Insert the RAM card only when the sewing unit is switched off.
- Should you insert the RAM card with the sewing unit switched on, it should not be write protected (activate the write protection only when the RAM card is inserted).
- If the RAM card is write protected outside the sewing unit, it may only be inserted with the sewing unit switched off.

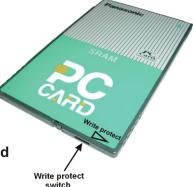

Ausgabe/Edition: 12.2006

Änderungskennziffer: 00.0

Printed in Federal Republic of Germany

Blatt: 2

von 2

Sheet:

from