




1. Allgemeine Informationen

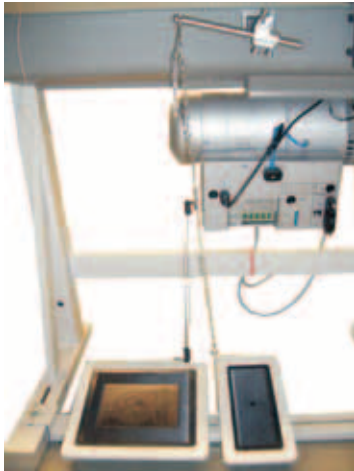

Die Unterklassen 867-190020; 867-190040; 867-290020 und 867-290040 können mit der Fußlüftung mit Pedal nachgerüstet werden.

1.1 Lieferumfang

Bevor Sie mit dem Einbau beginnen:

Bitte überprüfen Sie, ob alle Bauteile des Nachrüstsets in dem Lieferumfang enthalten sind.

Der komplette Bausatz für die Fußlüftung mit Pedal mit der Bestellnummer: 0867 590344 besteht aus folgenden Komponenten:

Bauteil	Teilenummer
1 x Pedal, kpl.	MG53 002521
1 x Knotenkette	0052 000360 D
2 x S-Haken	0052 000361
1 x Stange	0367 135250
2 x Sechskantschraube	9201 113697
2 x Scheibe	9330 000127
2 x Sechskantmutter	9231 110137







2. Einbau



Vorsicht Verletzungsgefahr!


Schalten Sie den Hauptschalter aus und ziehen Sie den Netzstecker, bevor sie mit dem Einbau beginnen. Der Einbau darf nur von einem qualifizierten Techniker vorgenommen werden.

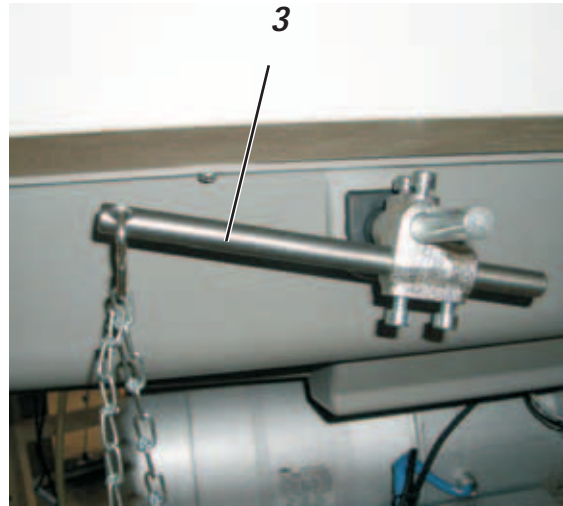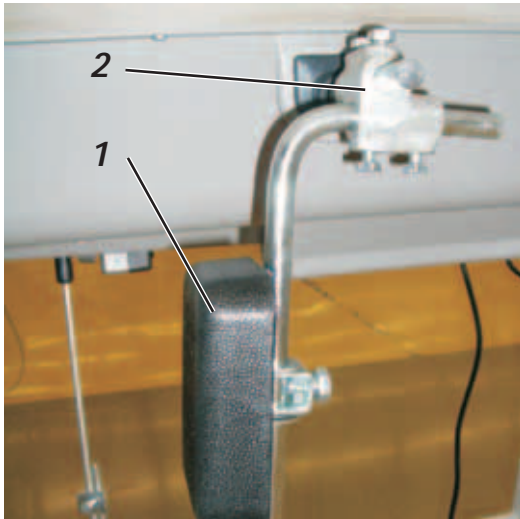

2.1 Kniehebel entfernen und Stange einbauen

- Entfernen Sie den Kniehebel 1 der Nähfußlüftung.
- Lösen Sie an dem Kloben 2 alle 4 Inbusschrauben und ersetzen Sie den Stellwinkel durch die Stange 3.
- Drehen Sie die Stange 3 entsprechend der Abbildung.
- Ziehen Sie nun die 4 Inbusschrauben wieder an.

2.2 Pedal anbauen und Gliederkette einhängen

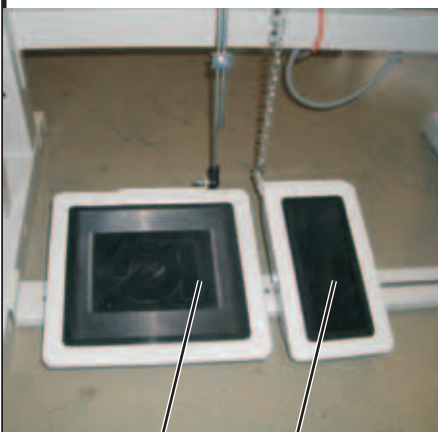

Wenn Sie das Untergestell MG53 002521 verwenden, schrauben Sie das mitgelieferte Pedal 4 mit den zwei Schrauben, zwei Scheiben und den zwei 6kt.Muttern an das Langloch neben das Antriebspedal 5.


- Hängen Sie die Knotenkette mit einem S-Haken an die Stange 3.
- Hängen Sie das andere Ende der Knotenkette mit dem zweiten S-Haken an dem zusätzlichen Pedal 4 ein.

5

4



1. General information

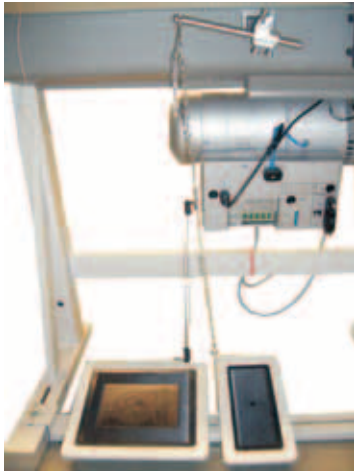

The subclass 867-190020; 867-190040; 867-290020 and 867-290040 can be retrofitted with the foot lift with pedal.

1.1 Scope of delivery

Before you begin with the installation:

Please check whether all components of the retrofit kit are included in the scope

The complete mounting kit for the foot lift with pedal with the order number 0867 590344 consists of the following components:

Bauteil	Teilenummer
1 x Pedal, complete	MG53 002521
1 x Chain	0052 000360 D
2 x S-Hook	0052 000361
1 x Bar	0367 135250
2 x Hexagonal screw	9201 113697
2 x Washer	9330 000127
2 x Hexagonal nut	9231 110137







2. Fitting



Caution: Danger of injury!


Switch off the main switch and pull out the mains plug before starting work. The installation must be done by qualified technicians only.

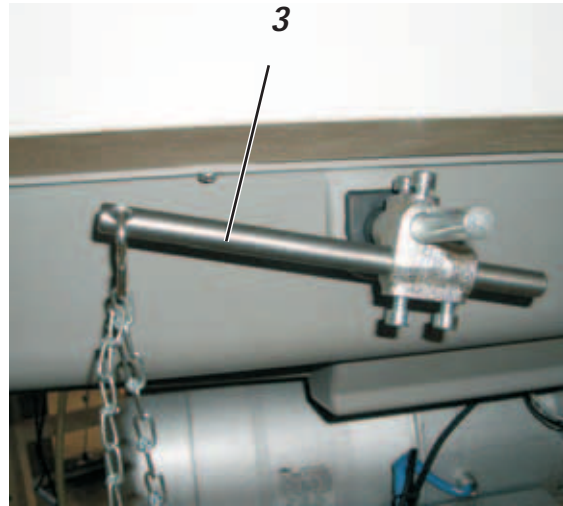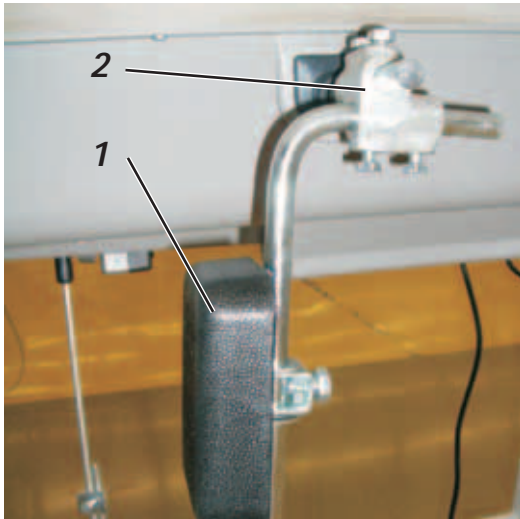

2.1 Remove the knee lever and mount the bar

- Remove the knee lever 1 of the sewing foot lift.
- Loosen all 4 hexagon socket screws of the block 2 and replace the knee lever linkage against the bar 3.
- Turn the bar 3 according to the illustration.
- Now tighten all 4 hexagon socket screws again.

2.2 Mount the pedal and attach the chain

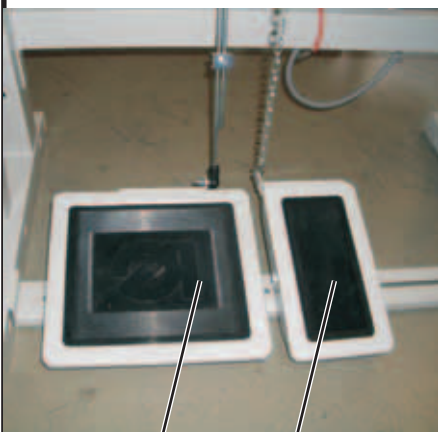

- If you use the stand MG53 002521, screw the enclosed pedal 4 on the elongated hole near the pedal 5.
- Put the converted block 1 in the sewing machine instead of the knee lever.
- Attach the one end of the chain with an S-hook to the bar 3.
- Attach the other end of the chain with the second S-hook to the additional pedal 4.

5

4